


SevenDirect™ SD20

pH Meter

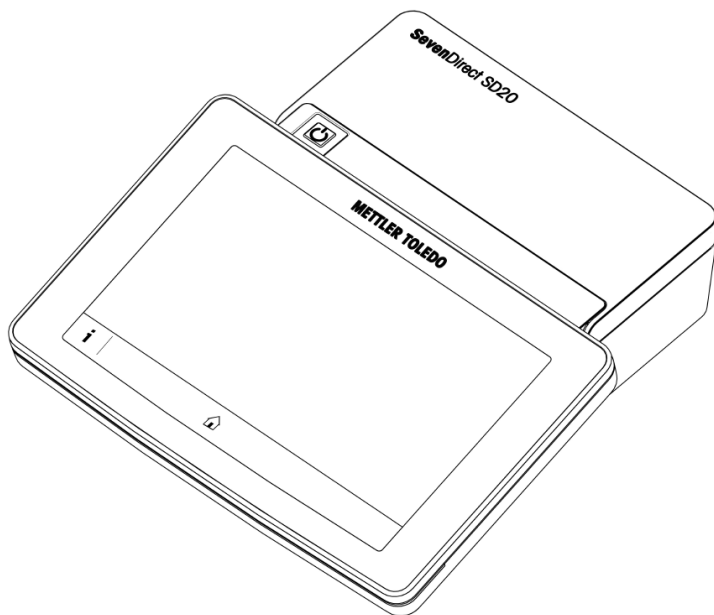

METTLER TOLEDO

Table of Contents

1	Introduction	3
2	Safety Information	4
2.1	Definitions of signal words and warning symbols	4
2.2	Product specific safety notes	4
3	Design and Function	6
3.1	Overview	6
3.2	Rear panel connections	6
3.3	User interface	7
3.3.1	Main sections at a glance	7
3.3.2	Home screen	7
3.3.2.1	Display representation	8
3.3.3	How to operate the touch screen	10
3.3.3.1	Selecting or activating an item	10
3.3.3.2	Scrolling up and down	10
3.3.3.3	Accessing specific menus.....	11
3.3.3.4	Secondary functions for list items	11
3.3.3.5	Entering characters and numbers	11
3.3.3.6	Entering numbers and unit	11
3.3.3.7	Changing date and time.....	12
4	Putting into Operation	13
4.1	Scope of delivery	13
4.2	Mounting EasyPlace™	13
4.3	Installing power supply.....	13
4.4	Switching the instrument on and off.....	14
4.5	First Startup Wizard	14
4.6	Connecting sensors.....	15
5	Starting Analysis	16
5.1	Selecting a method	16
5.2	Selecting a sensor	16
5.3	Starting a calibration	16
5.4	Starting a verification	17
5.5	Starting a measurement	17
5.6	Interrupting analysis	18
5.7	Endpoint criterion	18
5.8	Measurement status	18
6	Menu	19
6.1	Logging in and out.....	19
6.2	Global settings	20
6.2.1	General	20
6.2.2	Peripherals	20
6.2.3	Analysis settings	21
6.2.4	User settings	22
6.3	User management.....	23
6.3.1	Creating a new user.....	23
6.3.2	Deleting an user	24
6.3.3	Changing the password	24
6.3.4	Editing User Group	25
6.4	Sensors	26
6.4.1	Creating a sensor	26

6.4.2	Deleting a sensor	26
6.4.3	Editing a sensor	27
6.4.4	pH Sensor Parameters	27
6.4.5	Redox Sensor Parameters	28
6.5	Buffers & Standards	29
6.5.1	Creating customized buffer group / standard list	30
6.6	Maintenance & Service	31
6.6.1	Instrument	31
6.6.2	Service	31
6.6.3	Peripherals status	32
6.6.4	Import / Export	32
6.6.5	Update	32
6.6.6	Firmware history	33
6.6.7	Factory reset	33
7	Methods	34
7.1	Adding a new method	34
7.2	Cloning a method	35
7.3	Deleting a method	35
7.4	Editing a method	36
7.5	Printing a method	37
7.6	pH method parameters	37
7.7	Redox method parameters	41
7.8	Stability criteria	44
8	Result	45
8.1	Results fly-in	48
8.2	Result details	49
8.2.1	Result Reason & Result Status	49
9	Maintenance and Care	51
9.1	Cleaning the Instrument	51
9.2	Maintenance of electrodes	51
9.3	Transporting the instrument	52
9.4	Disposal	52
10	Sensors, Solutions and Accessories	53
11	Technical Data	55
12	Appendix	57
12.1	Predefined buffers	57
12.2	Predefined standards	61

1 Introduction

The SevenDirect is an intuitive, easy-to-operate benchtop meter for parameters such as pH, redox potential, conductivity and ion concentrations (depending on instrument version). It is designed for robustness in typical laboratory settings and supports the recording and transfer of important measurement data.

Conventions and symbols



Refers to an external document.

Note

For useful information about the product.

Elements of instructions

Instructions always contain action steps and can contain prerequisites, intermediate results and results. If an instruction contains more than one action step, the action steps are numbered.

- Prerequisites that must be fulfilled before the individual action steps can be executed.
- 1 Action step 1
 - ➡ Intermediate result
- 2 Action step 2
 - ➡ Result

2 Safety Information

Two documents named "User Manual" and "Reference Manual" are available for this instrument.

- The User Manual is printed and delivered with the instrument.
- The electronic Reference Manual contains a full description of the instrument and its use.
- Keep both documents for future reference.
- Include both documents if you transfer the instrument to other parties.

Only use the instrument according to the User Manual and the Reference Manual. If you do not use the instrument according to these documents or if the instrument is modified, the safety of the instrument may be impaired and Mettler-Toledo GmbH assumes no liability.



User Manual and Reference Manual are available online.

► www.mt.com/library



The FCC Supplier Declaration of Conformity is available online.

► <http://www.mt.com/ComplianceSearch>

2.1 Definitions of signal words and warning symbols

Safety notes contain important information on safety issues. Ignoring the safety notes may lead to personal injury, damage to the instrument, malfunctions and false results. Safety notes are marked with the following signal words and warning symbols:

Signal words

WARNING

A hazardous situation with medium risk, possibly resulting in death or severe injury if not avoided.

NOTICE

A hazardous situation with low risk, resulting in damage to the instrument, other material damage, malfunctions and erroneous results, or loss of data.

Warning symbols



Electrical shock

2.2 Product specific safety notes

Intended use

This instrument is designed to be used by trained staff. The SevenDirect™ SD20 pH Meter is intended for measuring pH and redox potential.

Any other type of use and operation beyond the limits of use stated by Mettler-Toledo GmbH without consent from Mettler-Toledo GmbH is considered as not intended.

Responsibilities of the instrument owner

The instrument owner is the person holding the legal title to the instrument and who uses the instrument or authorizes any person to use it, or the person who is deemed by law to be the operator of the instrument. The instrument owner is responsible for the safety of all users of the instrument and third parties.

Mettler-Toledo GmbH assumes that the instrument owner trains users to safely use the instrument in their workplace and deal with potential hazards. Mettler-Toledo GmbH assumes that the instrument owner provides the necessary protective gear.

Safety notes



WARNING

Death or serious injury due to electric shock

Contact with parts that carry a live current can lead to death or injury.

- 1 Only use the METTLER TOLEDO AC/DC adapter designed for your instrument.
- 2 Keep all electrical cables and connections away from liquids and moisture.
- 3 Check the cables and the plugs for damage and replace damaged cables and plugs.



NOTICE

Damage to the instrument or malfunction due to the use of unsuitable parts

- Only use parts from METTLER TOLEDO that are intended to be used with your instrument.


FCC Rules

This device complies with Part 15 of the FCC Rules and Radio Interference Requirements of the Canadian Department of Communications. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.


3 Design and Function

3.1 Overview

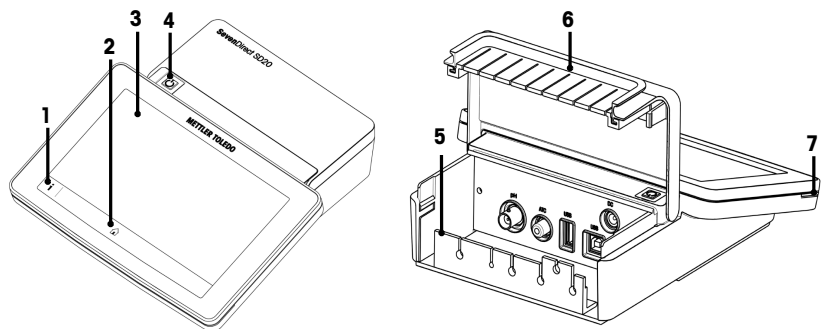

#	Description	Function
1	On screen help	To display help information for the current screen.
2	Home	To return from any menu level to Home screen .
3	Touch screen	Displays information and operates the meter.
4	Power switch	Switches the meter on/off. • Press to switch on. • Press and hold for 3 seconds to switch off.
5	Connector protection rubber	The removable dust rubber protects the meter from dust and the grooves are used for cable guidance.
6	Connector protection cover	• Closed to prevent dust from entering the meter. • Open to access rear panel connections.
7	Status light	Indicates whether the meter is: • ready for use: green • in use: blinking green • user intervention required: yellow • blocked: red

3.2 Rear panel connections

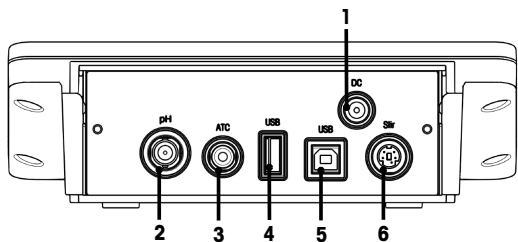

1	DC power supply socket	2	BNC socket for mV/pH signal input
3	ATC socket for temperature signal input	4	USB-A interface (USB-Stick, printer, barcode reader)
5	USB-B interface	6	Mini DIN socket for EasyMix

Note For best performance, use USB memory stick with FAT16 or FAT32 file system.

3.3 User interface

Note The screen shots in this manual are examples and can differ from the screen on your meter.

3.3.1 Main sections at a glance


The **Home screen** (1) is the central navigation point where all the menus and settings can be found. The **Menu** (2), **Methods** (3) and **Results fly-in** (4) open when using the handles along the sides of the main screen. The **Result** (5) opens when tapping **List** from (4).



See also

- 📖 Home screen ► Page 7
- 📖 Menu ► Page 19
- 📖 Methods ► Page 34
- 📖 Results fly-in ► Page 48
- 📖 Result ► Page 45

3.3.2 Home screen

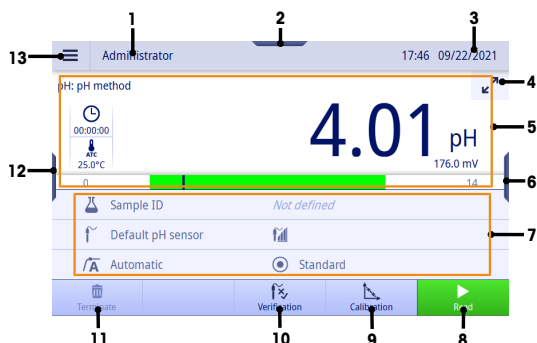


#	Description	Function
1	User name	Displays the name of the current user.
2	Methods handle	Enters into Methods to view and edit methods.
3	Date and time	Displays the current date and time. The format is set in Menu > Settings > General .
4	Activate / deactivate uFocus™ mode	Switches modes for the display representation. Details see [Display representation ► Page 8].
5	Measurement reading area	Displays the results of the current measurement, calibration or verification.
6	Results handle	Enters into Results fly-in to see the list of the latest 7 results.
7	Method information area	Displays the information about the sample, sensor and method.
8	Read	Starts measurements and confirms measurement results.
9	Calibration	Reviews sensor status, changes sensor and starts calibrations.
10	Verification	Reviews sensor status, changes sensor and starts verifications.
11	Terminate	Terminates the measurement, calibration or verification.
12	Menu handle	Enters into Menu to maintain settings, user management, sensors, buffers & standards and maintenance & service.
13	Menu button	

See also

General ► Page 20

3.3.2.1 Display representation


There are two modes available for the display representation: the full-information screen with all the information displayed, and the measurement close-up screen uFocus™, where the method information area is hidden and the measurement information is shown in large font. To toggle between these views, touch Activate / deactivate uFocus™ mode button  before, during or after a measurement.

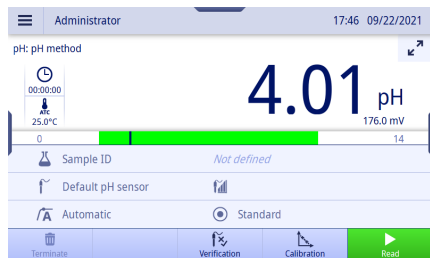

Standard view



uFocus™ view

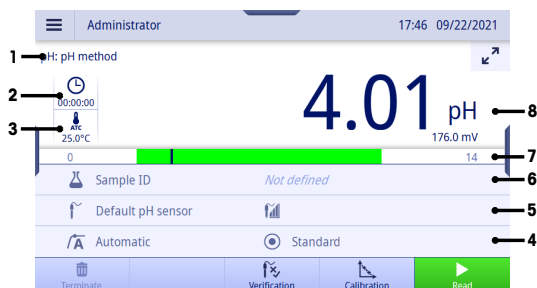

#	Description	Function
1	Method ID	Displays the measurement mode and the name of the active method. • 'pH': can perform pH measurement, pH sensor calibration and pH sensor verification • 'Redox': can perform redox measurement and redox sensor verification
2	Duration	• : displays the duration of the measurement. • : displays the number of data points which are already recorded. Only if Methods > Measure > Interval reading is active, you can tap to switch between these 2 modes.
3	Temperature	Displays the temperature. Tap to perform a temperature check while the meter is in idle state. • : gets the temperature value from the sample automatically. • : tap to change the temperature value used for the current measurement only.
4	Endpoint type	Displays the information of the endpoint type. If a user belonging to the Administrator user group is logged in, you can tap to enter the active method to adjust settings for the endpoint type and the stability criterion. 1. Endpoint type, defined in Methods > Measure > Endpoint type. –  Automatic: stops the measurement automatically when the signal is stable. –  Manual: manually stops the measurement by tapping Manual endpoint. –  Timed: stops the measurement after the predefined time. 2. Stability Criterion (pH only), defined in Methods > Measure > Stability criteria. Details see [Stability criteria ▶ Page 44]. –  Strict –  Standard –  Fast
5	Sensor name	Displays the information of the selected sensor. Tap to change to another sensor if no sensor is defined in the method and no ISM sensor is connected. 1. pH electrode condition –  Slope: 95-105% / Offset: $\pm(0-20)$ mV (Electrode is in good condition) –  Slope: 94-90% / Offset: $\pm(20-35)$ mV (Electrode needs cleaning) –  Slope: 89-85% / Offset: $\pm(>35)$ mV (Electrode is defective or too old) 2. Informs about whether a calibration is due based on: – Methods > Calibration > Calibration reminder – Menu > Settings > Analysis settings > Calibration expiry action 3. Inform about whether a verification is due based on: – Methods > Verification > Verification reminder – Menu > Settings > Analysis settings > Verification expiry action
6	Sample ID	Displays the information of the sample ID. Tap to set the sample ID manually.

#	Description	Function
7	Range indicator	Only visible for pH measurement mode. The green area shows the range covered by the current calibration. The bold vertical line will move to indicate the current measured value. If Methods > Measure > Limits of the measurement are defined, the limits are also indicated on the bar, marked as vertical lines.
8	Reading	Displays the measurement value and used measurement unit. - pH: raw value 'mV' with unit 'pH', 'mV' - Redox: raw value 'mV' with unit 'mV', 'Rel.mV'

3.3.3 How to operate the touch screen

The meter is operated by using a finger tapping on the touch screen.



NOTICE


Danger of damaging the touch screen with pointed or sharp objects!

Pressing on the touch screen with pointed or sharp objects may be damaged it.

- Operate the touch screen by applying gentle pressure with the pad of your finger.


3.3.3.1 Selecting or activating an item

- Tap the item or function to be selected or activated.

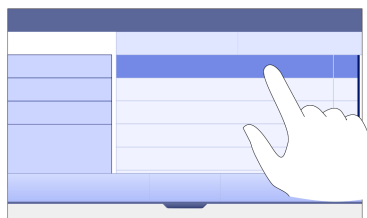

3.3.3.2 Scrolling up and down


- 1 Place the finger on the screen.
- 2 Move the list or content up and down.

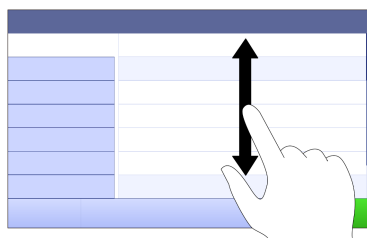

3.3.3.3 Accessing specific menus

The handles are placed along the sides of **Home screen**. Use the handles to access specific menus.
To use the handles, proceed as follows:


- Place the finger on the handle and slide the function window out or in.
- or -
- Swipe across the measurement reading area away from the handle of the menu which you want to open or close.
- or -
- Tap the handle symbol to open or close the function window.

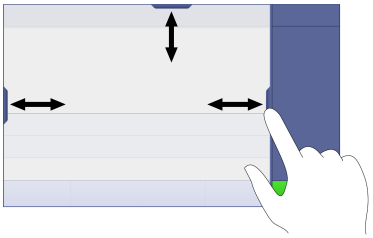

3.3.3.4 Secondary functions for list items


To access the secondary functions, proceed as follows:

- Place the finger on the triangle symbol ◀ and slide to the left to display the secondary functions.
- or -
- Swipe left across a list item to display its secondary functions and swipe right across to hide its secondary functions.
- or -
- Tap ◀ to display or hide the secondary functions.

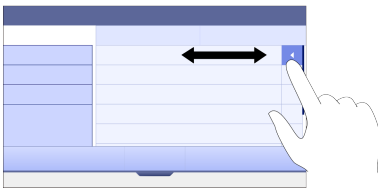


3.3.3.5 Entering characters and numbers

 The instrument has different keyboard layouts of the alphanumeric input field which can be selected in **Menu > Settings > User settings > Language**.The following image is an example of the English keyboard.




#	Description	Function
1	Backspace	Deletes the character left of the current cursor position. The cursor can be positioned by using the touch screen.
2	Discard	Closes the keyboard dialog and discards the input.
3	Confirm	Confirms the entered information.
4	Numbers and special characters	Switches to the keyboards for special characters and numbers.
5	Shift	Switches between lower or upper case letters. Double tap can engage caps lock.

3.3.3.6 Entering numbers and unit

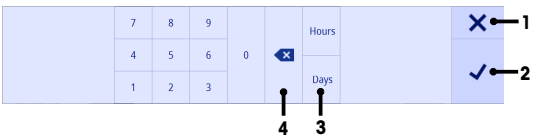

#	Description	Function
1	Discard	Closes the keyboard dialog and discards the input.
2	Confirm	Confirms the entered data.
3	Unit	Lists optional units. Tap to switch the unit. Only displayed if the unit can be changed.
4	Backspace	Deletes the number left of the current cursor position. The cursor can be positioned by using the touch screen.

3.3.3.7 Changing date and time

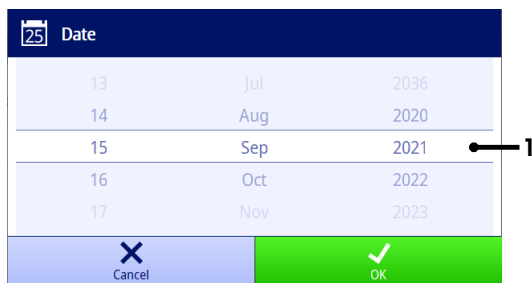

The display field (1) shows the defined date or time. Scroll to move the list up/down to change the display field.

Note The format of date and time can be defined in **Menu > Settings > General**.

4 Putting into Operation


4.1 Scope of delivery

Unpack the instrument and check the scope of delivery. Keep the calibration certificate in a safe place. SevenDirect™ is delivered with:

- AC adapter
- Electrode arm EasyPlace™ complete
- Protective cover
- EU Declaration of conformity
- Test report
- User Manual (print version)

4.2 Mounting EasyPlace™

- 1 Attach the base plate (1) to the pole (2) by tightening the Screws (3) by hand.
- 2 Put the Top Cover Pole (4) on the pole.
- 3 Insert the Sensor Holder (5) into the electrode arm (6).
- 4 Put the Parking Beaker Insert (7) into the Parking Beaker (8).
- 5 Put the Parking Beaker to the dedicated storage position (9).
- 6 Put the Sachet Holder (10) to the dedicated position (11), which is used to hold the buffers/standards.
- 7 Press the button (12) and slide up and down to adjust the height.
- 8 Rotate the electrode arm to adjust the sensor position.

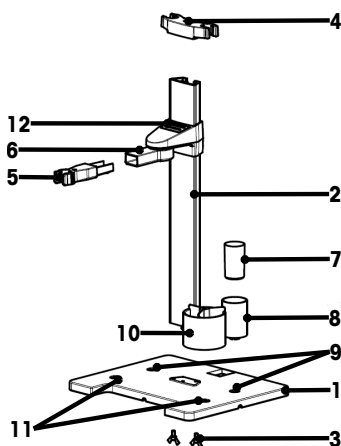

4.3 Installing power supply



WARNING

Death or serious injury due to electric shock

Contact with parts that carry a live current can lead to death or injury.

- 1 Only use the METTLER TOLEDO AC/DC adapter designed for your instrument.
- 2 Keep all electrical cables and connections away from liquids and moisture.
- 3 Check the cables and the plugs for damage and replace damaged cables and plugs.



NOTICE


Danger of damage to the AC adapter due to overheating!

If the AC adapter is covered or in a container, it is not sufficiently cooled and overheats.

- 1 Do not cover the AC adapter.
- 2 Do not put the AC adapter in a container.

The instrument is operated using an AC adapter. The AC adapter is suitable for all supply line voltages ranging from 100...240 V AC $\pm 10\%$ and 50-60 Hz.

- 1 Insert the correct connector plug into the AC adapter until it is completely inserted.
 - 2 Connect the cable of the AC adapter with the DC socket of the instrument.
 - 3 Install the cables in such a way that they cannot be damaged or interfere with operation.
 - 4 Insert the plug of the AC/DC adapter into a power outlet that is easily accessible.
- ➔ To remove the connector plug, push the release button and withdraw the connector plug.

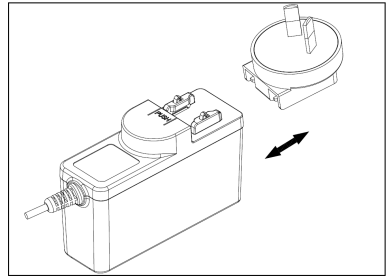

4.4 Switching the instrument on and off

Switching the instrument on

- 1 Press the power switch.
 - ➔ The StatusLight turns on.
 - 2 Wait for 1 - 2 seconds, the screen lights up and displays the startup image.
 - 3 The instrument is initialized. The instrument will be ready for operation in about 25 seconds.
- ➔ Login screen appears.

Switching the instrument off



NOTICE

Risk of data loss when switching off

The data will be lost when switching off while any processes are active.


– Make sure no measurement, calibration, verification, transfer and printout is running before you switch off the instrument.

- 1 Press the power switch for 3 seconds.
 - 2 The instrument stops running tasks and shuts down. This process will take some time.
- ➔ The screen turns off.

4.5 First Startup Wizard

At first startup of the instrument or after a factory reset, a First Startup Wizard guides you through the major settings of the instrument.

- 1 Select a Language from the language list.
 - ➔ The user interface switches to the language selected immediately.
- 2 Tap **Next**.

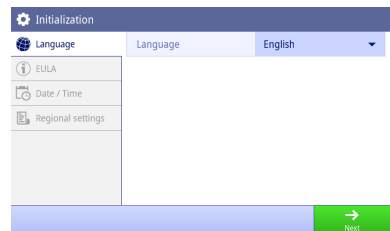

- 3 Scroll down to read the EULA and make it active.
- 4 Tap **Next**.

- 5 Set the date format, date and time one by one.
- 6 Tap **Next**.

- 7 Select the temperature unit and default buffers.
- 8 Tap **Finish**.

⇒ Get into Login screen.

- 9 Tap the default user account without password to enter **Home screen**.

If you want to change settings made during the startup wizard, they are all available in the settings menu.

4.6 Connecting sensors

When connecting a sensor, make sure that the plugs are properly inserted. If you are using a sensor with a built-in temperature probe or a separate temperature probe, connect the second cable to the ATC socket.

Example

- Connect a pH sensor to the BNC plug and if a temperature sensor, ISM or both are integrated, connect the RCA (Cinch) plug to the ATC input.

ISM® sensor

When connecting an ISM® sensor to the meter, the **ISM** icon **ISM** appears on the display and the sensor name of the sensor chip is registered and appears on the display.

The calibration history, the initial data and the maximum temperature can be reviewed in the data memory.

Note We strongly recommend you to switch off the meter when disconnecting an ISM sensor. In doing so, you make sure that the sensor is not removed while the instrument is reading data from or writing data to the ISM-chip of the sensor.

5 Starting Analysis

5.1 Selecting a method

Before starting the analysis, you must first select a method. You can select a predefined or user-defined method directly from the method lists.

To select a method, proceed as follows:

- 1 Use the top handle to access into **Methods** menu.
 - 2 Select a measurement mode from the side tab on the left.
 - 3 Tap the method you want to start.
- ➔ The measurement mode and method name is shown on **Home screen**.

5.2 Selecting a sensor

If the parameter in **Methods > Configuration > Sensor** is defined as 'Any' and no **ISM** sensor is connected, you can change a sensor on **Home screen** before starting an analysis.

To select a sensor, proceed as follows:

- 1 Tap the sensor name on **Home screen**.
 - or -
 - Tap **Calibration > Change sensor**.
 - or -
 - Tap **Verification > Change sensor**.

➔ The names of all available sensors are listed.
- 2 Tap the sensor that you want to select.

➔ The last calibration date of the sensor and the required buffers/standards are displayed.
- 3 Tap **Close** to go back to **Home screen**.
 - or -
 - Tap **Start calibration** to start the calibration.
 - or -
 - Tap **Start verification** to start the verification.

5.3 Starting a calibration

The meter allows you to perform pH calibrations with up to 5 points. The successful calibration data will be stored into the active sensor data.

Note

- The use of a temperature sensor or electrode with a built-in temperature sensor is recommended.
- If you use  (Manual) mode, you should enter the correct temperature value for each measurement and keep all buffers/standards and sample solutions at the set temperature.
- To ensure the most accurate readings, you should perform calibrations regularly.

Performing a Calibration

- Ensure that the appropriate buffers/standards have been selected.
- 1 Select an appropriate method according to [Selecting a method ▶ Page 16].
 - 2 Select a sensor if necessary according to [Selecting a sensor ▶ Page 16].
 - 3 Tap **Calibration**.
 - 4 Tap **Start calibration**.
 - 5 Enter the lot number if **Methods > Calibration > Check buffer lot number** is active and confirm with **OK**.

➔ The sensor name, the endpoint type and buffers/standards points are displayed.
 - 6 Place the sensor in a calibration buffer/standard.
 - 7 Tap **Read**.

➔ The font of the measurement values turns to light blue.
 - 8 The measurement stops when the endpoint criterion is fulfilled. See [Endpoint criterion ▶ Page 18].

- ⇒ ✓ appears in front of the passed calibration point.
- 9 Rinse the sensor with deionized water and place the sensor in the next calibration buffer/standard.
- 10 Tap **Read**.
 - ⇒ The font of the measurement values turns to light blue.
- 11 The measurement stops when the endpoint criterion is fulfilled. See [Endpoint criterion ► Page 18].
 - ⇒ ✓ appears in front of the passed calibration point.
- 12 Rinse the sensor with deionized water and repeat the steps with all buffers/standards.
 - ⇒ A window pops up with calibration data.
- 13 Tap **OK (Adjust)** to save the result.
 - or -
 - Tap **Reject** to reject the calibration and return to **Home screen**.

Finalize a Calibration in Advance

If **Home screen > Menu > Settings > Analysis settings > Finalize pH calibration at any point** is active, a button **Calculate** will display for the multi-point pH calibration. You can tap it to finalize the calibration in advance.

To finalize the calibration in advance, proceed as follows:

- The calibration is a multi-point pH calibration.
- At least one calibration point of a multi-point calibration is passed.
- 1 Tap **Calculate**.
- 2 Tap **OK (Adjust)** to save the result.
 - or -
 - Tap **Reject** to reject the calibration and return to **Home screen**.

The meter will do calibrations in the user-defined order in the active method. If one calibration point fails, you should redo this calibration point and cannot skip it.

However, if **Auto buffer recognition** of a pH method is active, the meter will automatically recognize the closest calibration point.

5.4 Starting a verification

The latest verification data will be stored into the data of the active sensor.

- Ensure that the appropriate buffers/standards have been selected.
- 1 Select an appropriate method according to [Selecting a method ► Page 16].
- 2 Select a sensor if necessary according to [Selecting a sensor ► Page 16].
- 3 Tap **Verification**.
- 4 Tap **Start verification**.
- 5 Enter the lot number if **Methods > Verification > Check buffer lot number** is active and confirm with **OK**.
 - ⇒ The verification point, sensor name, sensor status and the endpoint type are displayed.
- 6 Tap **Read**.
- 7 The measurement stops when the endpoint criterion is fulfilled. See [Endpoint criterion ► Page 18].
 - ⇒ A window pops up with verification data.
- 8 Tap **OK**.

5.5 Starting a measurement

- 1 Select an appropriate method according to [Selecting a method ► Page 16].
- 2 Select a sensor if necessary according to [Selecting a sensor ► Page 16].
- 3 Tap Sample ID to enter the Sample ID if necessary.
- 4 Place the sensor in the sample.
- 5 Tap **Read**.
- 6 The measurement stops when the endpoint criterion is fulfilled. See [Endpoint criterion ► Page 18].

7 Tap **Confirm** if **Menu > Settings > Analysis settings > Confirm end of analysis** is active.

5.6 Interrupting analysis

Ongoing analyses can be interrupted anytime.

To interrupt an analysis, proceed as follows:

- 1 Tap **Terminate**.
- 2 Confirm with **OK** to go back to **Home screen**.
- or -
Tap **Cancel** to continue the analysis.

5.7 Endpoint criterion

The measurement will stop based on the setting in **Methods > Measure > Endpoint type**.

If **Endpoint type** is defined as:

- **Automatic**: The measurement will stop automatically, based on the programmed stability criteria.
- **Manual**: The measurement will only stop when you tap **Manual endpoint**.
- **Timed**: The measurement will stop after the defined time in **Methods > Measure > Endpoint time**.

If **Home screen > Menu > Settings > Analysis settings > Allow taking of manual endpoint** is active, you can also stop the measurement manually by tapping **Manual endpoint** during the measurement, whatever the **Endpoint type** is defined for.

5.8 Measurement status


Measurement Reading

Measurement limit	In progress		Endpoint reached	
	Within limit	Out of limit	Within limit	Out of limit
Inactive	font: light blue		font: white	
	background: white		background: dark blue	
Active	font: light blue	font: red	font: white	
	background: white		background: green	background: red

Temperature Reading

Temperature limit	In progress		Endpoint reached	
	Within limit	Out of limit	Within limit	Out of limit
Inactive	font: light blue		font: white	
	background: white		background: dark blue	
Active	font: light blue	font: red	font: white	
	background: white		background: green	background: red

6 Menu

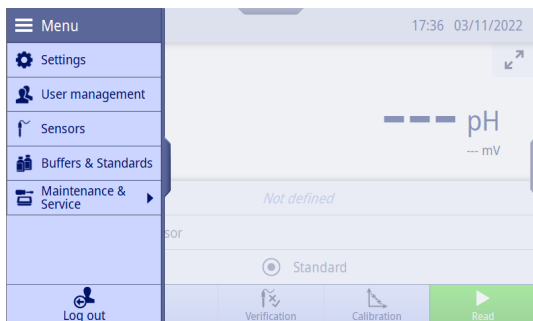

6.1 Logging in and out


Logging in

When the instrument switched on, the system starts up and enters into the Login screen first. You have to log in with your user account before you operate the instrument.

To log in, proceed as follows:

- 1 Select your user name from the user list on Login screen.
⇒ The selected user is highlighted.
- 2 If your user account has a password, enter the password.
- Or -
If your user account doesn't have the password, you don't need to enter anything.

⇒ Enter **Home screen**.

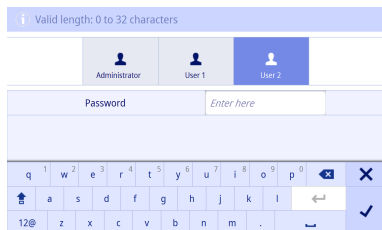


Logging out

You can log out of the instrument when there is no measurement, calibration, verification or data transfer running.

To log out, proceed as follows:

- 1 Use the menu handle or tap the menu button to enter **Menu**.
 - 2 Tap **Log out**.
- ⇒ Enter Login screen.

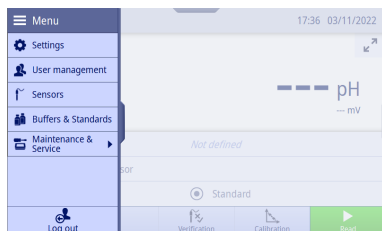

6.2 Global settings

Navigation: Home screen > Menu > Settings

Settings	
General	Date 03/11/2022
Peripherals	Date format MM/DD/YYYY
Analysis settings	Time 14:17
User settings	Temperature unit °C
	Status light ☒
	Brightness of status light 80%
	Glove mode ☐
Cancel Save	

In **Settings**, you can make general instrument settings that apply to all users. The settings here can only be changed by users in the **Administrator** user group.

Note Settings are only applied when confirming with **Save**.

6.2.1 General

You can view and set date and time, temperature unit, status light and brightness here.

Note Only users in the **Administrator** user group can change the settings.

Parameter	Description	Values
Date	Sets the current date.	-
Date format	Defines the format for displaying the date.	MM/DD/YYYY DD/MM/YYYY YYYY/MM/DD DD-MMM-YYYY
Time	Defines the time format and sets the current time.	-
Temperature unit	Defines the temperature unit to be shown, stored, transferred and printed. Predefined buffer groups and standard lists always use the unit °C as the reference temperature. For customized buffer groups and standard lists, the unit of the temperature depends on the active temperature unit.	°C °F
Status light	Active: The instrument will light up in different colors synchronized with the notification bar. - Green: OK - Yellow: Action required - Red: Error - Flashing Green: Busy	Active Inactive
Brightness of status light	The brightness changes immediately when changing the value from the list. Displayed if Status light is activated.	20% 40% 60% 80% 100%
Glove mode	Active: The screen sensitivity is increased.	Active Inactive

6.2.2 Peripherals

You can enable or disable each transfer settings of the meter here.

Note Only users in the **Administrator** user group can change the settings.

Parameter	Description	Values
Transfer to printer	Active: The instrument will do a required resource check before the measurement, calibration and verification. If there is no printer connected, you cannot do any analysis. If a printer is connected successfully, the result of the measurement, calibration and verification will be printed once the analysis is finished.	Active Inactive
Print after each interval	Active: The measurement data will be printed out after each interval time which is defined in the activated method > Measure > Interval time, until the measurement is finished. Displayed if Transfer to printer is activated.	Active Inactive
Transfer to USB memory stick	Active: The instrument will do a required resource check before measurement, calibration and verification. If there is no USB memory stick connected, you cannot do any analysis. If an USB memory stick is connected, the measurement, calibration and verification results will be transferred to the USB memory stick once the analysis is finished.	Active Inactive
Transfer to EasyDirect pH	Active: The instrument will do a required resource check before the measurement, calibration and verification. If the PC software is not connected, you cannot do any analysis. If the PC software is connected, the result of the measurement, calibration and verification will be transferred to the PC.	Active Inactive

6.2.3 Analysis settings

You can set additional analysis settings outside method settings here.

Note Only users in the **Administrator** user group can change the settings.

Parameter	Description	Values
Sample ID mandatory	Active: A sample ID must be available for each measurement. If the user attempts to start a measurement and no sample ID is available, an error message appears and the measurement cannot be started.	Active Inactive
Allow taking of manual endpoint	Active: You can take the endpoint manually by tapping Manual endpoint during the measurement, calibration and verification.	Active Inactive
Confirm end of analysis	Active: All endpoint results of the measurement, calibration and verification are shown on screen. The measurement is only completed when Confirm is tapped.	Active Inactive
Save result on instrument	Active: The results of the measurement, calibration and verification are stored in the meter.	Active Inactive
Range indicator tolerance	Sets a tolerance value for the calibration range which shows in the range indicator for pH measurement mode.	0.000...20.000 pH
Calibration expiry action	• Warn: If Calibration reminder of the active method is activated, the meter gives a warning when using a sensor with an expired calibration. However, you CAN still perform measurements with this sensor. • Warn and Block: If Calibration reminder of the activated method is activated, the meter gives a warning when using a sensor with an expired calibration. In addition, you CANNOT perform measurements with this sensor.	Warn Warn and Block

Parameter	Description	Values
Verification expiry action	Warn: If Verification reminder of the activated method is activated, the meter gives a warning when using a sensor with an expired verification. But you CAN still perform measurements with this sensor. Warn and Block: If Verification reminder of the activated method is activated, the meter gives a warning when using a sensor with an expired verification. In addition, you CANNOT perform measurements with this sensor.	Warn Warn and Block
Life span expiration action	Warn: If Monitoring life span of the activated sensor is activated, the meter gives a warning when the sensor with an expired life span. But you CAN still perform measurements with this sensor. Warn and Block: If Monitoring life span of the activated sensor is activated, the meter gives a warning when the sensor with an expired life span. In addition, you CANNOT perform measurements with this sensor.	Warn Warn and Block

6.2.4 User settings

User settings contains the settings that can be made specifically for each user.

Parameter	Description	Values
Language	Sets the language for the screen text display.	English German French Italian Spanish Portuguese Polish Russian Turkish Thai Korean Japanese Chinese (Simplified)
Keyboard layout	Defines the layout of the alphanumeric input field.	English French German
Screen brightness	The brightness changes immediately when changing the value from the list.	10% 20% 30% 40% 50% 60% 70% 80% 90% 100%
Screen saver	Active: The screen will become dark when there is no action on meter during the defined screen save wait time period. The user can touch any area to light up the screen. When there's a message or system event popup, the screen also will light up.	Active Inactive
Wait time	Displayed if Screen saver is activated.	1...120 min
Beep when pushing a button	Active: A beeping sound is played when you tap on the touch screen.	Active Inactive
Beep on error message	Active: A beeping sound is played when an error message is displayed.	Active Inactive
Beep on stability signal	Active: A beeping sound is played when a measurement result is stable.	Active Inactive
Beep on notification	Active: A beeping sound is played when a notification is displayed.	Active Inactive

6.3 User management

Navigation: Home screen > Menu > User management

User management

All

Administrator

Operator

User name

Administrator

User 1

User 2

Group

Administrator

Operator

Operator

Close

New

In **User management** you can manage the settings for user accounts and passwords. A maximum of 30 different users can be defined. Users can be created, deleted and edited.

User can only be managed by users in the appropriate user group.

The instrument has two user group levels. One is **Administrator** and the other is **Operator**. The user in **Administrator** user group has full access rights while the user in the **Operator** user group has limited access rights. There is a default user with a predefined user name (user name: Administrator, user group: Administrator) that cannot be deleted. It is recommended to change its password after the initial boot.

Note

- Only **Administrator** can view all users while **Operator** can only view their own.
- The user which is currently logged in cannot be deleted.

6.3.1 Creating a new user

Only users in the **Administrator** user group can create a new user.

To create a new user, proceed as follows:

- Logged-in user belongs to the user group **Administrator**.
 - Enter **User management**.
- 1 Tap **New**.
 - 2 Define **User name**, **Group**, **Password** and **Confirm password**.
 - ➡ If the user name is repeated, a warning message appears and **User name** changes to the original one.
 - 3 Tap **Save** to create the new user.
 - ➡ If **Password** and **Confirm password** don't match, an error message appears and the new user cannot be created. You need to change the passwords to be the same.

New User 1		
	User name	User 1
	Group	Operator
	Created on	03/13/2022
	Created by	Administrator
	Password	<i>Not defined</i>
	Confirm password	<i>Not defined</i>
	Cancel Save	

Parameter	Description	Values
User name	Defines the user name which uniquely identifies him to the system. Maximum 14 characters.	-
Group	Assignment of the user ID to a user group. Depending on the user group, the user has various rights.	Administrator Operator
Created on	Information on date and time of account creation.	-
Created by	Information on the administrator logged in at time of account creation.	-
Password	Maximum 32 characters, including upper and lower case letters, numbers and symbols. If they are blank, the user doesn't need to enter a password when logging in.	-
Confirm password	Double check the password.	-

6.3.2 Deleting an user

Only the users in the **Administrator** user group can delete a user.

The following users cannot be deleted:


- The system predefined user 'Administrator'.
- The current logged-in user.

To delete an user, proceed as follows:

- Logged-in user belongs to the user group **Administrator**.
- Enter **User management**.


1 Use the handle after the user name you want to delete.

2 Tap **Delete**.

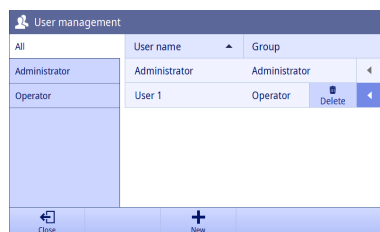

3 Confirm with **OK**.

➡ The user is removed from the user list.

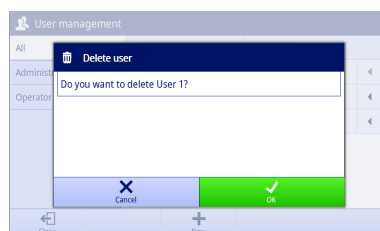

6.3.3 Changing the password

The users in the **Administrator** user group can change each user's password. The users in the **Operator** user group can only change its own password.

To change the password of the user, proceed as follows:

- Enter **User management**.

- 1 Tap the user name you want to change.
- 2 Tap **Change password**.

The screenshot shows the 'Edit User 1' form. It has a table with the following data:

User 1	User name	User 1
	Group	Operator
	Created on	03/13/2022
	Created by	Administrator

At the bottom, there are three buttons: 'Cancel' (with a close icon), 'Change password' (with a key icon), and 'Save' (with a checkmark icon).

- 3 Enter **New password** and **Confirm password**.

Note These two passwords must be the same.

- 4 Confirm with **OK**.

- 5 Tap **Save**.

Note Changes are only made when confirming with **Save**.

⇒ If **Password** and **Confirm password** don't match, an error message appears and the password cannot be changed. You have to change the passwords to be the same.

⇒ You have to use new password to login after logging out or screen saving.

The screenshot shows a 'Change password' dialog box overlaid on the 'Edit User 1' form. The dialog has two input fields: 'New password' and 'Confirm password', both with the placeholder text 'Not defined'. At the bottom of the dialog are 'Cancel' and 'OK' buttons. The 'OK' button is highlighted in green.

6.3.4 Editing User Group

The users in the **Administrator** user group can change each user's user group.

To edit a user's user group, proceed as follows:

- Logged-in user belongs to the user group **Administrator**.

- Enter **User management**.

- 1 Tap the user name you want to change.

⇒ **Save** function is inactive.

- 2 Change **Group** from the drop list.

⇒ **Save** function is active.


- 3 Tap **Save**.

Note Changes are only made when confirming with **Save**.

The screenshot shows the 'Edit User 1' form with the 'Group' dropdown menu set to 'Administrator'. The 'Save' button at the bottom right is now highlighted in green, indicating it is active.

6.4 Sensors

Navigation: Home screen > Menu > Sensors

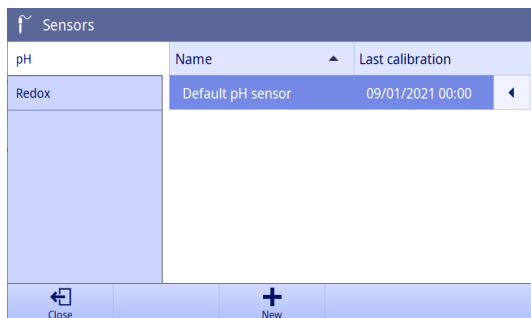

Sensors for pH and redox can be connected to the instrument. One default sensor per sensor type is predefined. Each method can only select the sensors with the matched sensor type.

Sensors can be created, modified and deleted. The usable life and life span of a sensor can be set and monitored. If a sensor is used for an active method, it is highlighted.


SD20 can create a maximum of 10 pH sensors and 10 redox sensors.

Note Digital ISM® sensors are detected automatically.


6.4.1 Creating a sensor

To create a new sensor, proceed as follows:

- Logged-in user belongs to the user group **Administrator**.
- Enter **Sensors** menu.
- 1 Tap **New**.
- 2 Select the measurement mode.

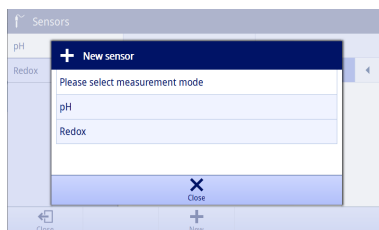

- 3 Select between the side tab on the left to define parameters.
 - 4 Tap **Save**.
Note Changes are only made when confirming with **Save**.
- ⇒ The new sensor is added into the sensor list.

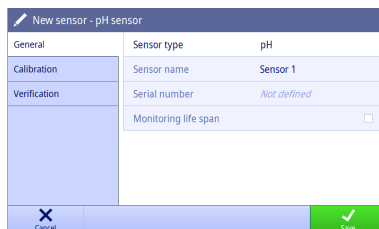


6.4.2 Deleting a sensor

The following sensors cannot be deleted:


- Attached **ISM** sensors
- The last sensor of this sensor type

To delete a sensor, proceed as follows:

- Logged-in user belongs to the user group **Administrator**.
- Enter **Sensors** menu.
- 1 Use the handle after the sensor that you want to delete.
- 2 Tap **Delete**.

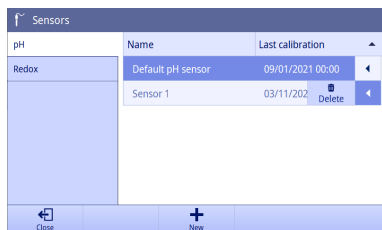

- 3 Confirm with **OK**.
- ➔ The sensor is removed from the sensor list.

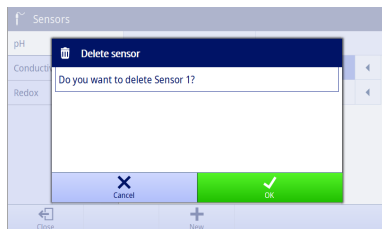


6.4.3 Editing a sensor

If the sensor is not used in a running measurement, verification or calibration, you can set the name, serial number and life span of this sensor.

Note You cannot edit the name or serial number for an **ISM®** sensor.

To edit a sensor, proceed as follows:

- Logged-in user belongs to the user group **Administrator**.
 - Enter **Sensors** menu.
 - 1 Tap the sensor that you want to edit.
 - 2 Select between the side tab on the left to define parameters.
 - 3 Tap **Save**.
- Note** Changes are only made when confirming with **Save**.

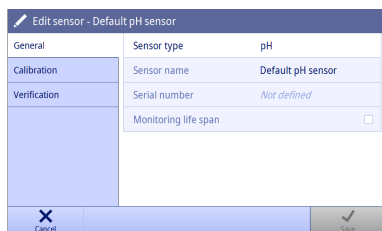

6.4.4 pH Sensor Parameters

General

Display and modify the general settings of the sensor.

Parameter	Description	Values
Sensor type	Information on the type of the sensor.	pH
Sensor name	Defines the name of the sensor. Maximum 16 characters.	-
Serial number	Defines the serial number of the sensor. Maximum 12 characters.	-

Monitoring life span	Active: The instrument checks the life span of the sensor at regular intervals and takes action based on Menu > Settings > Analysis settings > Life span expiration action.	Active Inactive
Initial operation	Defines the initial operation date of the sensor. Displayed if Monitoring life span is activated.	-
Life span	Defines the life span of the sensor. Displayed if Monitoring life span is activated.	1...100 Month(s)
Expiry date	Information on the expiry date. Displayed if Monitoring life span is activated.	-

Calibration

Display the current used calibration data of the sensor. The data is automatically stored after calibration finished successfully. You cannot modify any data here.

Parameter	Description	Values
Offset	Information on offset.	-
Slope	Information on the slope.	-
Calibration procedure	Information on calibration procedure.	-
Date / Time of calibration	Information on date and time of calibration.	-
Calibrated by	Information on the user name of the user who performed the calibration.	-

Verification

Display the current used verification data of the sensor. The data is automatically stored after verification finished. You cannot modify any data here.

Parameter	Description	Values
Verification result	Information on the verification result.	Pass Failed
Verification buffer	Information on the verification buffer.	-
Verification criteria	Information on the verification criteria.	-
Method	Information on the name of the method which is used for the verification.	-
Date / Time of verification	Information on date and time of the verification.	-
Verified by	Information on the user name of the user who performed the verification.	-

6.4.5 Redox Sensor Parameters

General

Display and modify the general settings of the sensor.

Parameter	Description	Values
Sensor type	Information on the type of the sensor.	Redox
Sensor name	Defines the name of the sensor. Maximum 16 characters.	-
Serial number	Defines the serial number of the sensor. Maximum 12 characters.	-

Monitoring life span	Active: The instrument checks the life span of the sensor at regular intervals and takes action based on Menu > Settings > Analysis settings > Life span expiration action.	Active Inactive
Initial operation	Defines the initial operation date of the sensor. Displayed if Monitoring life span is activated.	-
Life span	Defines the life span of the sensor. Displayed if Monitoring life span is activated.	1 ... 100 Month(s)
Expiry date	Information on the expiry date. Displayed if Monitoring life span is activated.	-

Verification

Display the current used verification data of the sensor. The data is automatically stored after verification finished. You cannot modify any data here.

Parameter	Description	Values
Verification result	Information on the verification result.	Pass Failed
Reference value	Information on the reference value.	-
Verification criteria	Information on the verification criteria.	-
Method	Information on the name of the method which is used for the verification.	-
Date / Time of verification	Information on date and time of the verification.	-
Verified by	Information on the user name of the user who performed the verification.	-

6.5 Buffers & Standards

Navigation: Home screen > Menu > Buffers & Standards

Buffers & Standards			
pH	Name	Reference temperature(°C)	
	METTLER TOLEDO	25.0	◀
	MT Europe	25.0	◀
	MT USA	25.0	◀
	ChP 2020	25.0	◀
	DIN(19266)/NIST	25.0	◀
	DIN(19267)	25.0	◀
◀ Close ➕ New			

In **Buffers & Standards**, you can view all predefined pH buffer groups and view all buffer values at different temperatures. You can neither delete nor edit any predefined buffer group.

If the user group of your user account is **Administrator**, you can create a maximum of 10 customized buffer groups. You can also modify and delete them.

6.5.1 Creating customized buffer group / standard list

To create a customized buffer group or standard list, proceed as follows:

- Logged-in user belongs to the user group **Administrator**.
 - Enter **Buffers & Standards** menu.
- 1 Tap **New** to create a buffer group / standard list.
 - Or -
 - Use the handle after the buffer group / standard list can delete it.
 - 2 Select the measurement mode.

- 3 Set **Name** and **Reference temperature** for the buffer group / standard list.

- 4 Tap **New** to add buffers / standards.
 - Or -
 - Use the handle after the buffers / standards to delete it.
- 5 Set **Name** for the buffer / standard.

- 6 Tap **New** to add buffer / standard values.
 - Or -
 - Use the handle after the buffer / standard values to delete it.
- 7 Tap the field to set the temperature and value.
- 8 Tap **OK** to save buffer / standard values.
- 9 Tap **Save** to save buffers / standards and the buffer group / standard list.

Note Once the buffer group / standard list is created, the reference temperature cannot be changed anymore.

6.6 Maintenance & Service

Navigation: Home screen > Menu > Maintenance & Service

Menu	
Settings	Instrument
User management	Service
Sensors	Peripheral status
Buffers & Standards	Import / Export
Maintenance & Service	Update
	Firmware history
	Factory Reset
Log out	

If you are logged in with the user in the **Administrator** user group, the following functions are available:

- **Instrument**
- **Service**
- **Peripheral status**
- **Import / Export**
- **Update**
- **Firmware history**
- **Factory Reset**

If you are logged in with the user in the **Operator** user group, you can only view **Instrument**.

6.6.1 Instrument

Navigation: Home screen > Menu > Maintenance & Service > Instrument

In the screen, you can see the following information of the instrument:

- **Instrument type**
- **Instrument serial number**
- **Instrument software version**
- **Instrument hardware version**
- **Last service date**
- **License declaration**
- **Open source license**

6.6.2 Service

Navigation: Home screen > Menu > Maintenance & Service > Service

In the screen, a list is shown with METTLER TOLEDO maintenance information. Each entry contains information about the date of last maintenance and the user name.

Set service life

Navigation: Home screen > Menu > Maintenance & Service > Service > Settings

Define the parameter for the service life to determine the date of the next maintenance interval. You can set a reminder to be informed on the upcoming maintenance. The following parameters can be set:

Parameter	Description	Values
Service life	Sets the maintenance intervals.	0...750 Day(s)

Parameter	Description	Values
Reminder	Active: A reminder informs about the days before the next maintenance takes place.	Active Inactive
Days before expiration	Defines how many days before the expiration to inform the reminder. Days before expiration must be smaller than Reminder . Displayed if Reminder is activated.	0...1000 Day(s)

6.6.3 Peripherals status

Navigation: Home screen > Menu > Maintenance & Service > Peripheral status

In this screen, you can see a list of devices that can be connected to the instrument. You can also check each status of these devices.

The following devices can be checked for connection:

- **Printer**
- **USB memory stick**
- **Barcode reader**
- **Stirrer**
- **PC**

6.6.4 Import / Export

Navigation: Home screen > Menu > Maintenance & Service > Import / Export

In the screen, you can either transfer data to or from USB sticks. Using a Memory copy is an easy way to transfer the settings from one instrument to another. Then quickly you have installed two instruments with identical functions.

The following data can be imported or exported:

- Methods
- Sensors
- Buffers & Standards
- User management
- Memory copy
- Log file

Note

- The function **Import / Export** is only possible when a USB stick is connected and no task is running.
- All the saved results, analysis data, METTLER TOLEDO tables and predefined buffer groups / standard lists are not contained in a memory copy.
- When you import or export user management settings, the entire user management settings, with all users and their properties, will be imported or exported.
- You can create and import a backup copy only when you are logged in with the user in the **Administrator** user group.
- Do not change the filenames of exported files.
- When importing a memory copy or user management, the instrument will reboot after the import is complete.

6.6.5 Update

Navigation: Home screen > Menu > Service > Update

In the screen, you can manage firmware updates of the instrument and modules. Data can be transferred from USB sticks.

Note

- You can implement a firmware update only when you are logged in with the user in the **Administrator** user group.
- METTLER TOLEDO provides additional information for updating instruments. These instructions will be part of the firmware update.

6.6.6 Firmware history

Navigation: Home screen > Menu > Maintenance & Service > Firmware history

You must log in with the user in the **Administrator** user group to see the screen. In the screen, a list shows all the firmware updates. The first entry on the list corresponds to initial operation.

All list entries show the following information:

- **Date:** The date of the installation.
- **Firmware version:** The software version installed.

6.6.7 Factory reset

Navigation: Home screen > Menu > Maintenance & Service > Factory Reset


You must log in with the user in the **Administrator** user group to see the screen. In the screen, you can reset all instrument settings to factory settings. A pop-up window informs you that all existing data and settings will be deleted.

Note If reset is performed, all created data, amendments, settings, setup entries and results will be lost.


Please create a **Memory copy** before you reset to factory settings.

To reset to factory settings, proceed as follows:

1 Tap **Factory Reset**.

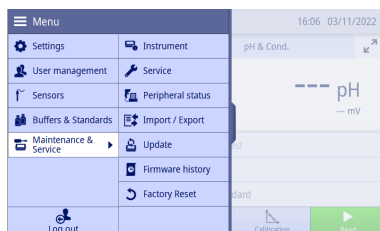


2 Tap **OK**.

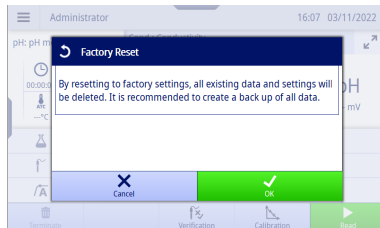


3 Tap **OK**.

➔ The instrument is shutting down and restarts with the First Start-up Wizard. All the data is deleted.

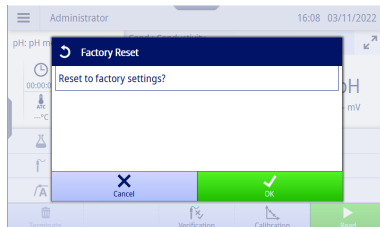

7 Methods

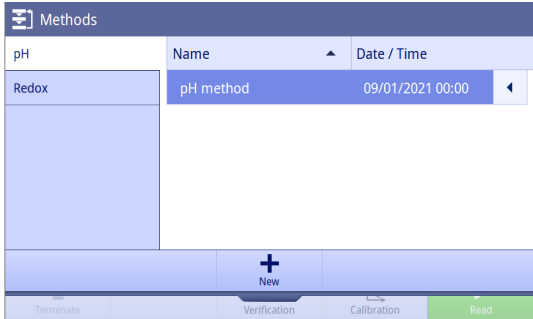

A method combines all parameters for a specific measurement procedure, including its associated calibration and verification. When settings are grouped into methods, it is easy and convenient to switch between the appropriate settings for different applications. It makes sure that no setting is left out.

The instrument predefines a method with default parameters for each measurement mode.


The active method is highlighted.

Note The images in this section show examples of the pH method and can differ from your instrument.

7.1 Adding a new method

To add a new method, proceed as follows:


- Enter **Methods**.
- 1 Tap **New** to create a new method.
- 2 Tap **pH** or **Redox** to select the measurement mode.

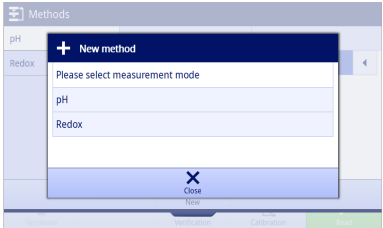

- 3 Select between the side tab on the left to define parameters.
- 4 Tap **Save**.
Note Changes are only made when confirming with **Save**.

- ➡ Go back to **Home screen**.
- ➡ The active method is updated to the newly created one.


Note The maximum number of methods across all method types is 20.

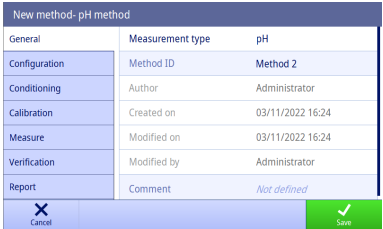


7.2 Cloning a method

To clone a method, proceed as follows:


- Enter **Methods**.
- 1 Select a measurement mode from the side tab on the left.
- 2 Use the handle after the method to access additional functions.

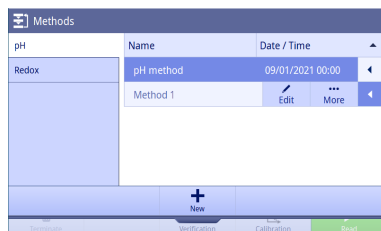

- 3 Tap **More**.

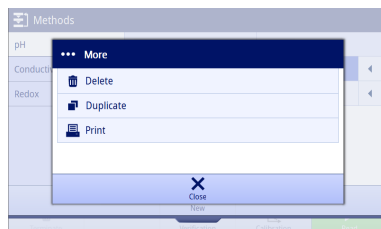


- 4 Tap **Duplicate**.
 - ⇒ A new method with the same parameters as the original one appears to be edited.
- 5 Select between the side tab on the left to define parameters.
 - ⇒ Go back to **Home screen**.
 - ⇒ The active method is updated to the newly created one.

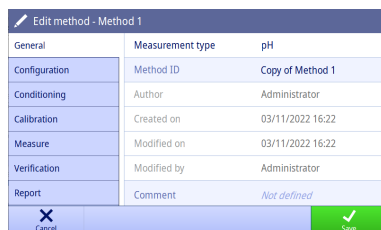

7.3 Deleting a method

To delete a method, proceed as follows:

- Enter **Methods**.
- 1 Select a measurement mode from the side tab on the left.
- 2 Use the handle after the method to access additional functions.

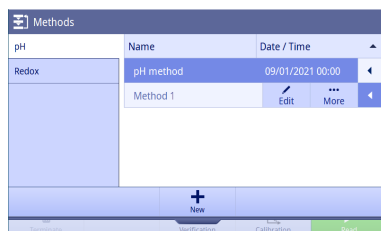

3 Tap **More**.




4 Tap **Delete**.

5 Confirm with **OK**.

➔ The method disappears from the method list immediately.

Note The activated method cannot be deleted.

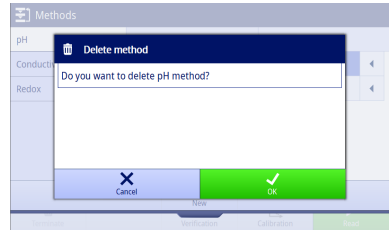

7.4 Editing a method


To edit a method, proceed as follows:

■ Enter **Methods**.

1 Select a measurement mode from the side tab on the left.

2 Use the handle after the method to access additional functions.

3 Tap **Edit**.

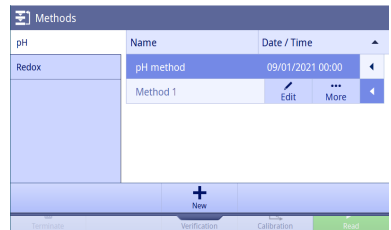


4 Select between the side tab on the left to define parameters.

5 Tap **Save**.

Note Changes are only made when confirming with **Save**.

➔ Go back to **Home screen**.



➔ The active method is updated to the modified one.

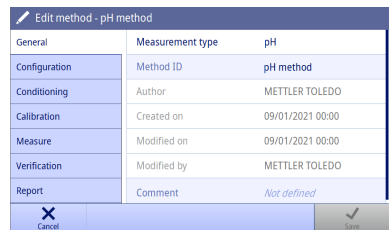

7.5 Printing a method

To print a method, proceed as follows:

- Enter **Methods**.
 - A printer is connected successfully.
 - 1 Select a measurement mode from the side tab on the left.
 - 2 Use the handle after the method to access additional functions.
 - 3 Tap **More**.
 - 4 Tap **Print**.
- ⇒ The method details are printed on the connected printer according to the format defined in **Methods > Report > Print format**.

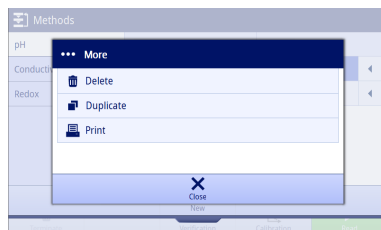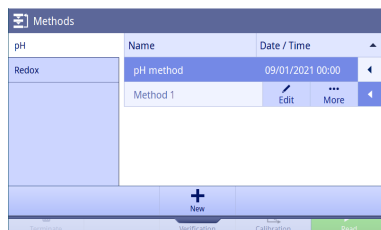

7.6 pH method parameters

General

Parameter	Description	Values
Measurement type	Information on the measurement type.	pH
Method ID	Defines the method name which uniquely identifies him to the system. Maximum 30 characters.	-
Author	Information on the administrator logged in at time of the method creation.	-
Created on	Information on date and time of the method creation.	-
Modified on	Information on date and time of the method modification.	-
Modified by	Information on the administrator logged in at time of the method modification.	-
Comment	Defines some comments. Maximum 128 characters.	-

Configuration

Parameter	Description	Values
Sensor	Select a sensor from the list of defined sensors if the method always runs with the same sensor. Any: You can select any suitable sensor before calibration, verification or measurement.	Any List of defined sensors

Temperature capture	Select the temperature capture mode. • Sensor: Uses the temperature measured by a connected temperature sensor. • Manual: Uses your input temperature value. • Auto-Recognition: Uses automatic temperature correction if a temperature sensor is connected and manual temperature correction otherwise..	Sensor Manual Auto-Recognition
Sensor type	Select the sensor type. For temperatures below 100 °C, select Auto. For temperatures above 100 °C, select the suitable temperature sensor. Displayed if Temperature capture = Sensor or Auto-Recognition.	Auto NTC 30k Pt1000
Temperature	Defines the temperature. Displayed if Temperature capture = Manual or Auto-Recognition.	-30.0 °C...130.0 °C -22.0 °F...266.0 °F
Sample ID	Defines the sample ID. Maximum 30 characters.	-
Auto sequential sample ID	Activates auto sequential sample ID. When using auto-sequential sample IDs, the instrument checks whether the last digits of a sample ID are numbers. If yes, the number is increased by 1 for the next measurement. If no, the number 1 is appended to the sample ID for the next measurement. If this method is reloaded or the instrument is restarted, the sample ID will be reset to the one defined in the method.	Active Inactive

Conditioning

Parameter	Description	Values
Stir	Active: A stirring period is applied before the measurement and verification starts (after pressing Read).	Active Inactive
Stirring time	Defines the stir duration. Displayed if Stir is activated.	1...1000000 s
Stirring speed	Select the stir speed. Displayed if Stir is activated.	10% 20% 30% 40% 50% 60% 70% 80% 90% 100%
Wait	Active: Defines the wait time. The wait time is applied after the stirring period of the pre-conditioning, but before the measurement.	Active Inactive 1...1000000 s
Use conditioning for calibration	Active: Conditioning settings are applied for each calibration point. Displayed if Stir or Wait is activated.	Active Inactive

Calibration

Parameter	Description	Values
Auto buffer recognition	• Active: You can measure buffers in any order during calibration. • Inactive: You need to indicate the buffer order for each calibration point manually.	Active Inactive

Parameter	Description	Values
Buffer(s)	Select a buffer for each calibration point from the list. Up to 5 buffers can be defined. The selected buffer values cannot be the same.	-
Check buffer lot number	Active: You need to enter a buffer lot number manually before each calibration point.	Active Inactive
Calibration mode	Select the calibration mode. Linear: The calibration curve is determined using linear regression. Segmented: The calibration curve is made up of linear segments joining the individual calibration points. If the number of the selected buffers is less than 3, the calibration mode can only be Linear . If high accuracy is required, Segmented is recommended.	Linear Segmented
Stir	Active: A stirring period is applied during the calibration.	Active Inactive
Stirring speed	Select the stir speed. Displayed if Stir is activated.	10% 20% 30% 40% 50% 60% 70% 80% 90% 100%
Calibration reminder	Active: The instrument checks the calibration expiry at regular intervals and takes action based on Menu > Settings > Analysis settings > Calibration expiry action .	Active Inactive 1...9999 Hour(s) 1...400 Day(s)

Measure

Parameter	Description	Values
Unit	Select the unit of the measured value.	pH mV
Decimal places	The values depend on the defined unit.	-
Endpoint type	Select the endpoint type. Automatic: The instrument determines when a measurement is to be stopped, based on the programmed stability criteria. Manual: You need to stop the measurement manually. Timed: The instrument stops the measurement after a defined time.	Automatic Manual Timed
Endpoint time	Defines the time after which the instrument stops the measurement. Displays if Endpoint type = Timed .	1...1000000 s
Stability criteria	Select the stability criteria. See [Stability criteria ► Page 44] for details.	Strict Standard Fast
Stir	Active: A stirring is applied during the measurement and verification.	Active Inactive
Stirring speed	Select the stir speed. Displayed if Stir is activated.	10% 20% 30% 40% 50% 60% 70% 80% 90% 100%
Limits	Active: The upper and lower limits for the measurement result can be defined. If the measurement result is either less than the lower limit or more than the upper limit, a warning is displayed on the screen.	Active Inactive

Lower limit	Defines the lower limit of the measurement result. The limit range is same as the measurement range. • Active: The instrument will display a warning when the measurement result is less than the lower limit. • Inactive: The instrument will not display a warning because of the lower result limit.	Active Inactive
Upper limit	Defines the upper limit of the measurement result. The limit range is same as the measurement range. The upper limit value should be larger than lower limit value. • Active: The instrument will display a warning when the measurement result is more than the upper limit. • Inactive: The instrument will not display a warning because of the upper result limit.	Active Inactive
Lower temp. limit	Defines the lower limit of the temperature. The limit range is same as the measurement range. • Active: The instrument will display a warning if the measured temperature is less than the lower temperature limit. • Inactive: The instrument will not display a warning because of the lower temperature limit.	Active Inactive
Upper temp. limit	Defines the upper limit of the temperature. The limit range is same as the measurement range. The upper limit value should be larger than lower limit value. • Active: The instrument will display a warning if the measured temperature is more than the upper temperature limit. • Inactive: The instrument will not display a warning because of the upper temperature limit.	Active Inactive
Interval reading	Active: The instrument records a measured value as a result at defined time intervals until the measurement is finished. Not recommended if Endpoint type is Automatic.	Active Inactive
Interval time	Defines the time difference between two recorded measurement values for interval measurements. Displayed if Interval reading is activated.	1...1000000 s

Verification

Parameter	Description	Values
Buffer(s)	Select a buffer from the list of defined buffers.	-
Verification criteria	Defines the verification criteria.	0.001...1.000 pH
Check buffer lot number	Active: You need to enter the lot number manually at the start of verification process.	Active Inactive
Verification reminder	Active: The instrument checks the verification expiry at regular intervals and takes action based on Menu > Settings > Analysis settings > Verification expiry action .	Active Inactive 1...9999 Hour(s) 1...400 Day(s)

Report

Parameter	Description	Values
Print format	Select the format of the report. Short: Prints a summary of the measurement result. Standard: Prints full measurement results. GLP: Prints detailed measurement result and method information.	Short Standard GLP

7.7 Redox method parameters

General

Parameter	Description	Values
Measurement type	Information on the measurement type.	Redox
Method ID	Defines the method name which uniquely identifies him to the system. Maximum 30 characters.	-
Author	Information on the administrator logged in at time of the method creation.	-
Created on	Information on date and time of the method creation.	-
Modified on	Information on date and time of the method modification.	-
Modified by	Information on the administrator logged in at time of the method modification.	-
Comment	Defines some comments. Maximum 128 characters.	-

Configuration

Parameter	Description	Values
Sensor	Select a sensor from the list of defined sensors if the method always runs with the same sensor. Any: You can select any suitable sensor before calibration, verification or measurement.	Any List of defined sensors
Temperature capture	Select the temperature capture mode. Sensor: Uses the temperature measured by a connected temperature sensor. Manual: Uses your input temperature value. Auto-Recognition: Uses automatic temperature correction if a temperature sensor is connected and manual temperature correction otherwise..	Sensor Manual Auto-Recognition
Temperature	Defines the temperature. Displayed if Temperature capture = Manual or Auto-Recognition .	-30.0 °C...130.0 °C -22.0 °F...266.0 °F
Sample ID	Defines the sample ID. Maximum 30 characters.	-

Auto sequential sample ID	Activates auto sequential sample ID. When using auto-sequential sample IDs, the instrument checks whether the last digits of a sample ID are numbers. If yes, the number is increased by 1 for the next measurement. If no, the number 1 is appended to the sample ID for the next measurement. If this method is reloaded or the instrument is restarted, the sample ID will be reset to the one defined in the method.	Active Inactive
---------------------------	--	-------------------

Conditioning

Parameter	Description	Values
Stir	Active: A stirring period is applied before the measurement and verification starts (after pressing Read).	Active Inactive
Stirring time	Defines the stir duration. Displayed if Stir is activated.	1...1000000 s
Stirring speed	Select the stir speed. Displayed if Stir is activated.	10% 20% 30% 40% 50% 60% 70% 80% 90% 100%
Wait	Active: Defines the wait time. The wait time is applied after the stirring period of the pre-conditioning, but before the measurement.	Active Inactive 1...1000000 s

Measure

Parameter	Description	Values
Unit	Select the unit of the measured value.	mV Rel.mV
Offset	Displayed if Unit = Rel.mV .	-2000.0...2000.0 mV
Decimal places	The values depend on the defined unit.	-
Endpoint type	Select the endpoint type. Automatic: The instrument determines when a measurement is to be stopped, based on the programmed stability criteria. Manual: You need to stop the measurement manually. Timed: The instrument stops the measurement after a defined time.	Automatic Manual Timed
Endpoint time	Defines the time after which the instrument stops the measurement. Displays if Endpoint type = Timed.	1...1000000 s
Stability criteria	Select the stability criteria. See [Stability criteria ► Page 44] for details.	Strict Standard Fast
Stir	Active: A stirring is applied during the measurement and verification.	Active Inactive
Stirring speed	Select the stir speed. Displayed if Stir is activated.	10% 20% 30% 40% 50% 60% 70% 80% 90% 100%
Limits	Active: The upper and lower limits for the measurement result can be defined. If the measurement result is either less than the lower limit or more than the upper limit, a warning is displayed on the screen.	Active Inactive

Lower limit	Defines the lower limit of the measurement result. The limit range is same as the measurement range. • Active: The instrument will display a warning when the measurement result is less than the lower limit. • Inactive: The instrument will not display a warning because of the lower result limit.	Active Inactive
Upper limit	Defines the upper limit of the measurement result. The limit range is same as the measurement range. The upper limit value should be larger than lower limit value. • Active: The instrument will display a warning when the measurement result is more than the upper limit. • Inactive: The instrument will not display a warning because of the upper result limit.	Active Inactive
Lower temp. limit	Defines the lower limit of the temperature. The limit range is same as the measurement range. • Active: The instrument will display a warning if the measured temperature is less than the lower temperature limit. • Inactive: The instrument will not display a warning because of the lower temperature limit.	Active Inactive
Upper temp. limit	Defines the upper limit of the temperature. The limit range is same as the measurement range. The upper limit value should be larger than lower limit value. • Active: The instrument will display a warning if the measured temperature is more than the upper temperature limit. • Inactive: The instrument will not display a warning because of the upper temperature limit.	Active Inactive
Interval reading	Active: The instrument records a measured value as a result at defined time intervals until the measurement is finished. Not recommended if Endpoint type is Automatic.	Active Inactive
Interval time	Defines the time difference between two recorded measurement values for interval measurements. Displayed if Interval reading is activated.	1...1000000 s

Verification

Parameter	Description	Values
Reference value	Defines the reference value.	-500...500 mV
Verification criteria	Defines the verification criteria.	-500...500 mV
Verification reminder	Active: The instrument checks the verification expiry at regular intervals and takes action based on Menu > Settings > Analysis settings > Verification expiry action.	Active Inactive 1...9999 Hour(s) 1...400 Day(s)

Report

Parameter	Description	Values
Print format	Select the format of the report. • Short: Prints a summary of the measurement result. • Standard: Prints full measurement results. • GLP: Prints detailed measurement result and method information.	Short Standard GLP

7.8 Stability criteria

Measurement Type	Stability criteria		
	Strict	Standard	Fast
pH or Redox	Value varies less than 0.03 mV during the last 8 seconds or 0.1 mV for the last 20 seconds.	Value varies less than 0.1 mV during the last 6 seconds.	Value varies less than 0.6 mV during the last 4 seconds.

8 Result

Navigation: Home screen > Results fly-in > List

Result				
All	5	Date / Time	Result value	
pH	2	2022-03-11 15:24:13	100.0%, 0.0 mV	◀
Redox	0	2022-03-11 15:24:34	3.96 pH	◀
Calibration	1	2022-03-11 15:25:15	7.00 pH	◀
Verification	2	2022-03-11 15:25:28	5.31 pH	◀
		2022-03-11 15:25:54	7.00 pH	◀

Close
Columns
Filter
Export all
Delete all

The instrument can save up to 2000 standard results. If the maximum number of results is reached, older results are deleted. In case of large data sets, the total number of results may be reduced and multiple older results may be deleted. For safe long term data storage, it is recommended to maintain your data separately from the instrument, such as on printouts or by exporting to the EasyDirect™ pH PC software.

The results are divided into several categories by the tab in the left.

- **All**: show all results in a list, including the measurement, calibration and verification.
- **pH**: show pH measurement results in a list.
- **Redox**: show redox measurement results in a list.
- **Calibration**: show calibration results in a list.
- **Verification**: show verification results in a list.

Two columns of result data are displayed in the result list. You can tap the name of the column to sort the results.

Tap the result row you can see the details of the result.

Selecting data to display


You can select the following data to display in a result list:

- **Date / Time**: default
- **Method ID**
- **Sample ID**
- **Result value**: default
- **Result status**
- **User name**

To select the data to display, proceed as follows:

- Enter a result list category.
- 1 Tap **Columns**.
- 2 Use the drop down list to select which data to display in the first column.
- 3 Use the drop down list to select which data to display in the second column.
- 4 Confirm with **OK**.

➡ Only the columns of the current result list changes.

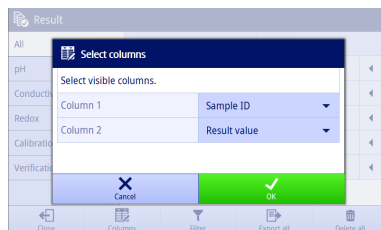


Filtering results

To filter result, proceed as follows:

- Enter a result list category.
- 1 Tap **Filter**.
- 2 Enter the data you want to be filtered and confirm with **OK**.
 - OR -
- 3 Tap **Clear filter** to show all results.

Note


- You are only able to filter according to the visible columns in the result list.
- Column **Result value** cannot set filter.

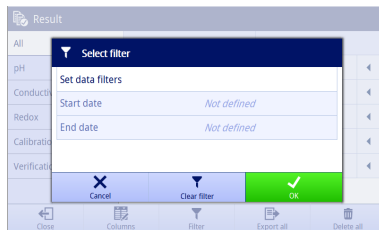


Exporting a result

To export the result that you want to export, proceed as follows:

- Enter a result list category.
- 1 Use the handle after the result that you want to export.
- 2 Tap **More**.
 - OR -
- 3 Tap the result that you want to export.
- 4 Tap **Export**.

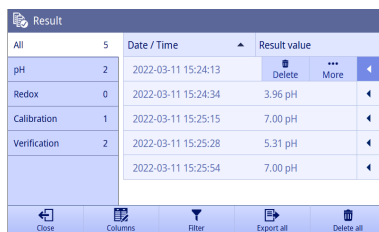


- 5 Select a device to export to.
- 6 Confirm with **OK**.
- ➡ The result is stored in the device.

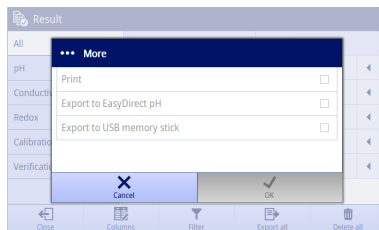

Exporting all results


To export all results, proceed as follows:

- Enter a result list category.
- 1 Tap **Export all** to export multiple results.

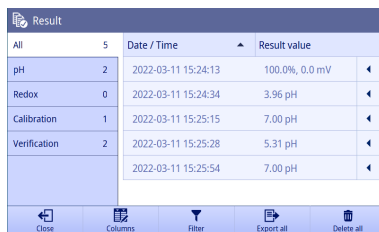

- 2 Select a device to export to.
 - 3 Confirm with **OK**.
- ⇒ All results are stored in the device.

Note If tapped **Export all**, only the results displayed on the current result list can be export. For example, if you set a filter and then tap **Export all**, the results that are filtered out are not exported.

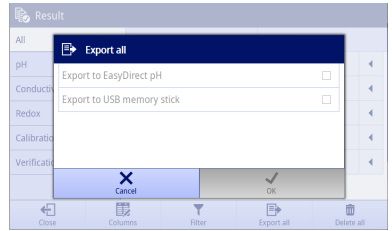


Deleting a result

To delete a result that you want to delete, proceed as follows:

- Enter a result list category.
- 1 Use the handle after the result that you want to delete.
- OR -
 - 2 Tap the result that you want to delete.
 - 3 Tap **Delete**.



- 4 Confirm with **OK**.
- ⇒ This result is removed from the result list category.

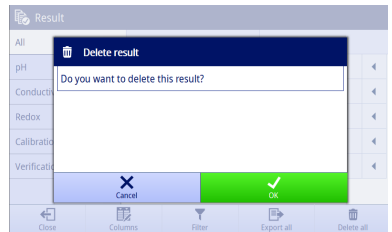


Deleting all results

To delete all results, proceed as follows:

- Enter a result list category.
- 1 Tap **Delete all results** to delete multiple results.
 - 2 Confirm with **OK**.
- ⇒ The result list category is empty.

Note If tapped **Delete all results**, only the results displayed on the current result list can be deleted. For example, if you set a filter and then tap **Delete all results** the results filtered out are not deleted.

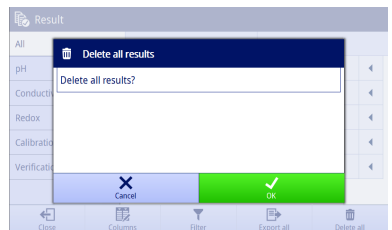

Print a result

To print a result that you want to print, proceed as follows:

- 1 Use the handle after the result that you want to print.
- 2 Tap **More**.

Result				
All	5	Date / Time	Result value	
pH	2	2022-03-11 15:24:13		
Redox	0	2022-03-11 15:24:34	3.96 pH	
Calibration	1	2022-03-11 15:25:15	7.00 pH	
Verification	2	2022-03-11 15:25:28	5.31 pH	
		2022-03-11 15:25:54	7.00 pH	

 Close  Columns  Filter  Export all  Delete all

- 3 Select **Print**.
 ➡ A new line with **Format** pops up.
- 4 Select a format.
- 5 Confirm with **OK**.


Result				
All	 More			
pH	Print 			
Conductivity	Format 			
Redox	Export to EasyDirect pH ☐			
Calibration	Export to USB memory stick ☐			
Verification				
	 Cancel  OK			

 Close  Columns  Filter  Export all  Delete all

8.1 Results fly-in

The newest 7 results are displayed in **Results fly-in** sorted by date / time ascending, with the latest result at the top of the list.

There are 2 lines in a result. Tap a result and you can see the details about the result quickly.

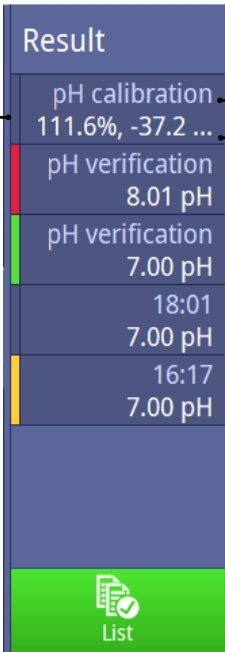	#	Description
	1	- For measurement - Sample ID - Time for today's results if no Sample ID is entered - Date for old results if no Sample ID is entered "..." if the Sample ID is too long - For calibration - pH calibration / cond. calibration / Ion calibration - For verification - pH verification / cond. verification / Ion verification / redox verification
	2	The result of the measurement, calibration or verification. Only the result of the first segment is visible.
	3	The color bar changes if limits of measurement results are activated or for verification results. - Red - Measurement value outside limits - Verification value failed to fulfill criteria - Green - Measurement value within limits - Verification value fulfill criteria - Blue - No limit is used for measurement - All accepted calibration results are blue - Yellow - Rejected calibration result - Terminated measurement result - Rejected verification result Rejection or termination of a calibration result takes precedence over the measurement limits. Therefore, yellow color will be shown instead of red or green if multiple options are applicable.

8.2 Result details

Different result types store different details. The main parts are as follows.

- Settings:** Displays the most important settings for the analysis.
- Data:** Displays the data of buffers/standards, stable status and time.
- Result:** Displays the result status and the information of analysis result.
- Resource:** Displays the information of the sensor.
- Interval:** Visible when the method uses **Interval reading**. Displays the list of each interval reading.
- Table:** Visible for calibration results. Displays the list of calibration points.

8.2.1 Result Reason & Result Status

If more than one status applies, the result shows the higher status level. Result status level (from low to high) is OK < OK* < Failed < Error. If more than one error occurred, the instrument shows all of them as **Result reason**.

If none of the below criteria applies, the result status is 'OK'.

Result reason	Result Status		
	For measurement	For calibration	For verification
Calibration expired	OK*	-	OK*
Verification expired	OK*	-	-
No valid verification	OK*	-	-
Out of calibration range (pH only)	OK*	-	OK*
Out of measurement range	Failed	Failed	Failed
Out of measurement limits	Failed	-	-
Out of temperature limits	Failed	-	-
Slope out of range	-	Failed	-
Offset out of range	-	Failed	-
Terminated	Error	Error	Error
Sensor removed (ISM)	Error	Error	Error
Resource lost	Error	Error	Error
System problem	Error	Error	Error

9 Maintenance and Care

Do not open the housing of the instrument; it does not contain any parts that can be maintained, repaired or replaced by the user. If you experience problems with your instrument, contact your authorized METTLER TOLEDO dealer or service representative.

► www.mt.com/contact

Note: It is recommended to restart the instrument periodically for optimal performance.

9.1 Cleaning the Instrument



NOTICE

Danger of damage to the instrument due to inappropriate cleaning agents!

The housing is made of acrylonitrile butadiene styrene/polycarbonate (ABS/PC). This material is sensitive to some organic solvents, such as toluene, xylene and methyl ethyl ketone (MEK). If liquids enter the housing they can damage the instrument.

- 1 Use only water and a mild detergent to clean the housing.
- 2 Wipe off any spills immediately.

- The instrument is turned off and disconnected from the electrical outlet.
- Clean the housing of the instrument using a cloth dampened with water and a mild detergent.

If you have questions about the compatibility of cleaning agents, contact your authorized METTLER TOLEDO dealer or service representative.

► www.mt.com/contact

9.2 Maintenance of electrodes

The instrument monitors the condition of the attached pH electrodes.



Slope: 95-105%
and offset: $\pm$ (0-20) mV
Electrode is in good condition



Slope: 90-94%
or offset: $\pm$ (20-35) mV
Electrode needs cleaning



Slope: 85-89%
or offset: $\pm$ (>35) mV
Electrode is defective or too old

When cleaning, always follow the instructions in the manual of the electrodes used. Make sure the pH electrode is always kept filled with the appropriate filling solution. For maximum accuracy, any filling solution that may have "crept" and encrusted the outside of the electrode should be removed with deionized water. Always store the electrode according to the manufacturer's instructions and do not allow it to dry out.

If the electrode slope falls rapidly, or if the response becomes sluggish, the following procedures may help. Try one of the following, depending on your sample.

Problem	Action
Fat or oil build-up	Either rinse the membrane with soap solution or acetone/ethanol or shortly soak the tip of the electrode in warm water. When rinsed with organic solvent, place the membrane overnight in 0.1 mol/L HCl.
pH electrode membrane has dried out	Soak the tip of the electrode overnight in 0.1 mol/L HCl. If this procedure has no effect, soak the tip of the electrode for a few minutes in reactivation solution for pH electrodes.
Protein build-up in the diaphragm of a pH electrode	Remove deposits by soaking the electrode in an HCl/pepsin solution for few hours or overnight.
Silver sulfide contamination of pH electrode	Remove deposits by soaking the electrode in a thiourea solution.

Run a new calibration after treatment.

Note

- Cleaning and filling solutions should be handled with the same care as that given to toxic or corrosive substances.

9.3 Transporting the instrument

Note the following instructions when transporting the instrument to a new location:

- Transport the instrument with care to avoid damage! The instrument may be damaged if not transported correctly.
- Unplug the instrument and remove all connected cables.
- Remove the electrode arm.
- To avoid damage to the instrument when transporting it over long distances, please use the original packaging.
- If the original packaging is no longer available, choose packaging that will ensure safe handling.

9.4 Disposal

In conformance with the European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) this device may not be disposed of in domestic waste. This also applies to countries outside the EU, per their specific requirements.

Please dispose of this product in accordance with local regulations at the collecting point specified for electrical and electronic equipment. If you have any questions, please contact the responsible authority or the distributor from which you purchased this device. Should this device be passed on to other parties, the content of this regulation must also be related.



10 Sensors, Solutions and Accessories

pH Sensors

Parts	Order No.
ISM® sensors with MultiPin™ head	
InLab®Micro Pro-ISM, 3-in-1 pH sensor, glass shaft, 5 mm shaft diameter, ATC, refillable	51344163
InLab®Power Pro-ISM, 3-in-1 pH sensor, glass shaft, ATC, pressurized SteadyForce™ reference system	51344211
InLab®Pure Pro-ISM, 3-in-1 pH sensor, glass shaft, immovable glass sleeve, ATC, refillable	51344172
InLab®Routine Pro-ISM, 3-in-1 pH sensor, glass shaft, ATC, refillable	51344055
InLab®Science Pro-ISM, 3-in-1 pH sensor, glass shaft, movable glass sleeve, ATC, refillable	51344072
InLab®Solids Pro-ISM, 3-in-1 pH sensor, glass shaft, open junction, sharp membrane, ATC	51344155

pH solutions

Solutions	Order No.
pH 2.00 buffer sachets, 30 x 20 mL	30111134
pH 2.00 buffer solution, 250 mL	51350002
pH 2.00 buffer solution, 6 x 250 mL	51350016
pH 4.01 buffer sachets, 30 x 20 mL	51302069
pH 4.01 buffer solution, 250 mL	51350004
pH 4.01 buffer solution, 6 x 250 mL	51350018
pH 7.00 buffer sachets, 30 x 20 mL	51302047
pH 7.00 buffer solution, 250 mL	51350006
pH 7.00 buffer solution, 6 x 250 mL	51350020
pH 9.21 buffer sachets, 30 x 20 mL	51302070
pH 9.21 buffer solution, 250 mL	51350008
pH 9.21 buffer solution, 6 x 250 mL	51350022
pH 10.01 buffer sachets, 30 x 20 mL	51302079
pH 10.00 buffer solution, 250 mL	51350010
pH 10.00 buffer solution, 6 x 250 mL	51350024
pH 11.00 buffer sachets, 30 x 20 mL	30111135
pH 11.00 buffer solution, 250 mL	51350012
pH 11.00 buffer solution, 6 x 250 mL	51350026
Rainbow sachets I (10 sachets of pH 4.01 / 7.00 / 9.21)	51302068
Rainbow sachets II (10 sachets of pH 4.01 / 7.00 / 10.01)	51302080
Rainbow bottles I (2 x 250 mL of pH 4.01 / 7.00 / 9.21)	30095312
Rainbow bottles II (2 x 250 mL of pH 4.01 / 7.00 / 10.00)	30095313
InLab storage solution (for all InLab pH and redox electrodes), 250 mL	30111142
Electrolyte 3 mol/L KCl, 25 mL	51343180
Electrolyte 3 mol/L KCl, 250 mL	51350072

Solutions	Order No.
Electrolyte 3 mol/L KCl, 6 x 250 mL	51350080
HCl/Pepsin solution (removes protein contamination), 250 mL	51350100
Thiourea solution (removes silver sulfide contamination), 250 mL	51350102
Regeneration solution for pH electrodes, 25 mL	51350104

Conductivity sensors

Parts	Order No.
InLab®731-ISM	30014092
InLab®741-ISM (steel)	30014094
InLab®710 (glass)	51302256
InLab®720 (glass)	51302255
InLab®751-4mm (narrow shaft)	51344030

Conductivity solutions

Parts	Order No.
10 µS/cm conductivity standard solution, 250 mL	51300169
84 µS/cm conductivity standard solution, 250 mL	51302153
84 µS/cm conductivity standard solution, 30 x 20 mL sachets	30111140
500 µS/cm conductivity standard solution, 250 mL	51300170
1413 µS/cm conductivity standard solution, 30 x 20 mL sachets	51302049
1413 µS/cm conductivity standard solution, 6 x 250 mL	51350096
12.88 mS/cm conductivity standard solution, 30 x 20 mL sachets	51302050
12.88 mS/cm conductivity standard solution, 6 x 250 mL	51350098

11 Technical Data

General

Screen	Color TFT	
Interfaces	USB-A	USB-Stick (FAT12/FAT16/FAT32)/ Printer/barcode reader
	USB-B	Computer
Ambient conditions	Ambient temperature	5...40 °C
	Relative humidity	5...80% (non-condensing)
	Overvoltage category	Class II
	Pollution degree	2
	Range of application	For indoor use only
	Maximum operating altitude	Up to 5000 m
Standards for safety and EMC	See Declaration of Conformity	
Dimensions	Width	195 mm
	Depth	205 mm
	Height	65 mm
	Weight	850 g
Power rating instrument	Input voltage	12 V $\equiv$
	Maximum power consumption	11 W
Power rating AC adapter	Line voltage	100 - 240 V $\sim \pm 10$ %
	Input frequency	50/60 Hz
	Input current	0.5 A
	Output voltage	12 V $\equiv$
	Output current	1.5 A
Materials	Housing	ABS/PC reinforced
	Window	Glass

pH measurement

Measurement range	pH	-2.000...20.000
	mV	-2000.0...2000.0
	Temperature	-30.0...130.0 °C
Resolution	pH	0.1/0.01/0.001
	mV	1/0.1
	Temperature	0.1 °C
Accuracy	pH	± 0.002
	mV	± 0.1 (-500.0...500.0 mV) ± 0.2 (< -500.0 mV or > 500.0 mV)
	Temperature	± 0.1 °C (0.0...100.0 °C) ± 0.3 °C (< 0.0 °C or > 100.0 °C)
Isopotential point	pH 7.00	
pH input	BNC, impedance > $3 \cdot 10^{12} \Omega$	

Temperature input	RCA (Cinch) NTC 30kΩ or PT1000	
Calibration (pH)	Calibration points	1...5
	Predefined buffer groups	11
	User-defined buffer groups	10
	Automatic buffer recognition	Yes
	Calibration methods	Linear, segmented

Redox measurement

Measurement range	mV	-2000.0...2000.0 mV
	rel.mV	-2000.0...2000.0
	Temperature	-30...130 °C
Resolution	mV	1/0.1
	rel.mV	1/0.1
	Temperature	0.1 °C
Accuracy	mV	± 0.1 (-500...500 mV)
		± 0.2 (< -500 mV or > 500 mV)
	Temperature	± 0.1 °C (0.0...100.0 °C)
		± 0.3 °C (< 0.0 °C or > 100.0 °C)
mV input	BNC, impedance > 3 · 10 ¹² Ω	
Temperature input	RCA (Cinch) NTC 30kΩ or PT1000	

12 Appendix

12.1 Predefined buffers

Note: If you intend to connect ISM sensors calibrated on SevenDirect to other meters, it is recommended to use the buffer groups MT USA, MT Europe or technical for traceability. Otherwise, the combined METTLER TOLEDO buffer group offers the greatest convenience.

METTLER TOLEDO (Ref. 25°C) USA & Europe & Technical

T [°C]	1.68	2.00	4.01	5.00	7.00	8.00	9.21	10.00	10.01	11.00
0.0	1.67	2.03	4.01	5.04	7.12	8.07	9.52	-	10.32	11.9
5.0	1.67	2.02	4.01	5.03	7.09	8.06	9.45	10.65	10.25	11.72
10.0	1.67	2.01	4.00	5.02	7.06	8.07	9.38	10.39	10.18	11.54
15.0	1.67	2.00	4.00	5.01	7.04	8.04	9.32	10.26	10.12	11.36
20.0	1.68	2.00	4.00	5.00	7.02	8.02	9.26	10.13	10.06	11.18
25.0	1.68	2.00	4.01	5.00	7.00	8.00	9.21	10.00	10.01	11.00
30.0	1.68	1.99	4.01	5.01	6.99	7.98	9.16	9.87	9.97	10.82
35.0	1.69	1.99	4.02	5.01	6.98	7.95	9.11	9.74	9.93	10.64
40.0	1.69	1.98	4.03	5.03	6.97	7.94	9.06	9.61	9.89	10.46
45.0	1.70	1.98	4.04	5.05	6.97	7.91	9.03	9.48	9.86	10.28
50.0	1.71	1.98	4.06	5.06	6.97	7.90	8.99	9.35	9.83	10.10
55.0	1.72	1.98	4.08	5.08	6.98	7.89	8.96	-	-	-
60.0	1.72	1.98	4.10	5.11	6.98	7.86	8.93	-	-	-
65.0	-	1.98	4.13	5.14	6.99	7.88	-	-	-	-
70.0	1.74	1.99	4.16	5.17	7.00	7.87	8.88	-	-	-
75.0	-	1.99	4.19	5.20	7.02	7.86	-	-	-	-
80.0	1.77	2.00	4.22	5.23	7.04	7.85	8.83	-	-	-
85.0	-	2.00	4.26	5.26	7.06	7.86	-	-	-	-
90.0	1.79	2.00	4.30	5.29	7.09	7.87	8.79	-	-	-
95.0	1.81	2.00	4.35	5.32	7.12	7.87	8.77	-	-	-

DIN(19266)/NIST (Ref. 25°C)

T [°C]	1.679	3.557	3.776	4.005	6.865	7.413	9.180	10.012	12.454
0.0	1.666	-	3.865	4.000	6.984	7.534	9.464	10.317	-
5.0	1.668	-	3.840	3.998	6.951	7.500	9.395	10.245	13.207
10.0	1.670	-	3.820	3.997	6.923	7.472	9.332	10.179	13.003
15.0	1.672	-	3.802	3.998	6.900	7.448	9.276	10.118	12.810
20.0	1.675	-	3.788	4.000	6.881	7.429	9.225	10.062	12.627
25.0	1.679	3.557	3.776	4.005	6.865	7.413	9.180	10.012	12.454
30.0	1.683	3.552	3.766	4.011	6.853	7.400	9.139	9.966	12.289
35.0	1.688	3.549	3.759	4.018	6.844	7.389	9.102	9.926	12.133
37.0	-	3.548	3.756	4.022	6.841	7.386	9.088	9.910	-
38.0	1.691	-	-	-	-	-	-	-	12.043
40.0	1.694	3.547	3.754	4.027	6.838	7.380	9.068	9.889	11.984
45.0	-	-	-	-	-	-	-	-	11.841
50.0	1.707	3.549	3.749	4.050	6.833	7.367	9.011	9.828	11.705

JJG119 (Chinese) (Ref. 25°C)

T [°C]	1.680	3.559	3.776	4.003	6.864	7.413	7.699	9.182	10.012	12.460
0.0	1.668	-	3.863	4.006	6.981	7.534	8.471	9.458	10.317	13.416
5.0	1.669	-	3.840	3.999	6.949	7.500	8.303	9.391	10.245	13.210
10.0	1.671	-	3.820	3.996	6.921	7.472	8.142	9.330	10.179	13.011
15.0	1.673	-	3.802	3.996	6.898	7.448	7.988	9.276	10.118	12.820
20.0	1.676	-	3.788	3.998	6.879	7.429	7.840	9.226	10.062	12.637
25.0	1.680	3.559	3.776	4.003	6.864	7.413	7.699	9.182	10.012	12.460
30.0	1.684	3.551	3.766	4.010	6.852	7.400	7.563	9.142	9.966	12.292
35.0	1.688	3.547	3.759	4.019	6.844	7.389	7.433	9.105	9.926	12.130
37.0	1.694	3.547	3.756	4.022	6.839	7.386	7.382	-	9.910	12.069
40.0	1.694	3.547	3.754	4.029	6.838	7.380	7.307	9.072	9.889	11.975
45.0	1.700	3.550	-	4.042	6.834	-	7.186	9.042	-	11.828
50.0	1.706	3.555	3.749	4.055	6.833	7.367	7.070	9.015	9.828	11.697
55.0	1.713	3.563	-	4.070	6.834	-	-	8.990	-	11.553
60.0	1.721	3.573	-	4.087	6.837	-	-	8.968	-	11.426
70.0	1.739	3.596	-	4.122	6.847	-	-	8.926	-	-
80.0	1.759	3.622	-	4.161	6.862	-	-	8.890	-	-
90.0	1.782	3.648	-	4.203	6.881	-	-	8.856	-	-
95.0	1.795	3.660	-	4.224	6.891	-	-	8.839	-	-

MERCK (Ref. 20°C)

T [°C]	2.00	4.00	7.00	9.00	12.00
5.0	2.01	4.05	7.07	9.16	12.41
10.0	2.01	4.03	7.05	9.11	12.26
15.0	2.00	4.02	7.02	9.05	12.10
20.0	2.00	4.00	7.00	9.00	12.00
25.0	2.00	3.99	6.98	8.95	11.88
30.0	2.00	3.98	6.98	8.91	11.72
35.0	2.00	3.98	6.96	8.88	11.67
40.0	2.00	3.98	6.95	8.85	11.54
45.0	2.00	3.98	6.95	8.82	11.44
50.0	2.00	3.98	6.95	8.79	11.33

DIN(19267) (Ref. 25°C)

T [°C]	1.09	3.06	4.65	6.79	9.23	12.75
0.0	1.08	-	4.67	6.89	9.48	-
10.0	1.09	3.10	4.66	6.84	9.37	13.37
20.0	1.09	3.07	4.65	6.80	9.27	12.96
25.0	1.09	3.06	4.65	6.79	9.23	12.75
30.0	1.10	3.05	4.65	6.78	9.18	12.61
40.0	1.10	3.04	4.66	6.76	9.09	12.29
50.0	1.11	3.04	4.68	6.76	9.00	11.98
60.0	1.11	3.04	4.70	6.76	8.92	11.69
70.0	1.11	3.04	4.72	6.76	8.88	11.43
80.0	1.12	3.05	4.75	6.78	8.85	11.19
90.0	1.13	3.07	4.79	6.80	8.82	10.99

GB/T(27501) (Ref. 25°C)

T [°C]	1.680	3.559	4.003	6.864	9.182	12.460
0.0	1.668	-	4.006	6.981	9.458	13.416
5.0	1.669	-	3.999	6.949	9.391	13.210
10.0	1.671	-	3.996	6.921	9.330	13.011
15.0	1.673	-	3.996	6.898	9.276	12.820
20.0	1.676	-	3.998	6.879	9.226	12.637
25.0	1.680	3.559	4.003	6.864	9.182	12.460
30.0	1.684	3.551	4.010	6.852	9.142	12.292
35.0	1.688	3.547	4.019	6.844	9.105	12.130
40.0	1.694	3.547	4.029	6.838	9.072	11.975
45.0	1.700	3.550	4.042	6.834	9.042	11.828
50.0	1.706	3.555	4.055	6.833	9.015	11.697
55.0	1.713	3.563	4.070	6.834	8.990	11.553
60.0	1.721	3.573	4.087	6.837	8.968	11.426
70.0	1.739	3.596	4.122	6.847	8.926	-
80.0	1.759	3.622	4.161	6.862	8.890	-
90.0	1.782	3.648	4.203	6.881	8.856	-
95.0	1.795	3.660	4.224	6.891	8.839	-

JISZ882(Japanese)

T [°C]	1.679	4.008	6.865	9.180
5.0	1.668	3.999	6.951	9.395
10.0	1.670	3.998	6.923	9.332
15.0	1.672	3.999	6.900	9.276
20.0	1.675	4.002	6.881	9.225
25.0	1.679	4.008	6.865	9.180
30.0	1.683	4.015	6.853	9.139
35.0	1.688	4.024	6.844	9.102
40.0	1.694	4.035	6.838	9.068
45.0	1.700	4.047	6.834	9.038
50.0	1.707	4.060	6.833	9.011

ChP 2020 (Ref. 25°C)

T [°C]	1.68	4.01	6.68	9.18	12.45
0.0	1.67	4.01	6.98	9.46	13.43
5.0	1.67	4.00	6.95	9.40	13.21
10.0	1.67	4.00	6.92	9.33	13.00
15.0	1.67	4.00	6.90	9.27	12.81
20.0	1.68	4.00	6.88	9.22	12.63
25.0	1.68	4.01	6.68	9.18	12.45
30.0	1.68	4.01	6.85	9.14	12.30
35.0	1.69	4.02	6.84	9.10	12.14
40.0	1.69	4.04	6.84	9.06	11.98
45.0	1.70	4.05	6.83	9.04	11.84
50.0	1.71	4.06	6.83	9.01	11.71
55.0	1.72	4.08	6.83	8.99	11.57
60.0	1.72	4.09	6.84	8.96	11.45

12.2 Predefined standards

International

T [°C]	10 µS/cm	84 µS/cm	500 µS/cm	1413 µS/cm	12.88 mS/cm
5.0	6.13	53.02	315.3	896	8.22
10.0	7.10	60.34	359.6	1020	9.33
15.0	7.95	67.61	402.9	1147	10.48
16.0	8.15	69.25	-	-	-
17.0	8.36	70.89	-	-	-
18.0	8.56	72.52	-	-	-
19.0	8.77	74.16	-	-	-
20.0	8.97	75.80	451.5	1278	11.67
21.0	9.18	77.44	-	-	-
22.0	9.38	79.08	-	-	-
23.0	9.59	80.72	-	-	-
24.0	9.79	82.36	-	-	-
25.0	10.00	84.00	500.0	1413	12.88
30.0	11.03	92.19	548.5	1552	14.12
35.0	12.14	100.92	602.5	1696	15.39
40.0	13.29	109.21	-	-	-
45.0	14.44	118.05	-	-	-
50.0	15.55	126.80	-	-	-

Chinese

T [°C]	146.5 µS/cm	1408 µS/cm	12.85 mS/cm	111.3 mS/cm
15.0	118.5	1141.4	10.455	92.12
18.0	126.7	1220.0	11.163	97.80
20.0	132.2	1273.7	11.644	101.70
25.0	146.5	1408.3	12.852	111.31
35.0	176.5	1687.6	15.353	131.10

Japanese Standards

T [°C]	1330 µS/cm	133.0 µS/cm	26.6 µS/cm
0.0	771.40	77.14	15.428
5.0	911.05	91.11	18.221
10.0	1050.70	105.07	21.014
15.0	1190.35	119.04	23.807
20.0	1330.00	133.00	26.600
25.0	1469.65	146.97	29.393
30.0	1609.30	160.93	32.186
35.0	1748.95	174.90	34.979

Saturated NaCl

T [°C]	251.3 mS/cm
5.0	155.5
10.0	177.9
15.0	201.5
20.0	226.0
25.0	251.3
30.0	277.4
35.0	304.1

METTLER TOLEDO ION

T [°C]	0.1 mg/L	1 mg/L	10 mg/L	100 mg/L	1000 mg/L
20.0	0.1	1	10	100	1000
25.0	0.1	1	10	100	1000
30.0	0.1	1	10	100	1000

To protect your product's future:

METTLER TOLEDO Service assures the quality, measuring accuracy and preservation of value of this product for years to come.

Please request full details about our attractive terms of service.

www.mt.com/pHLab

For more information

Mettler-Toledo GmbH

Im Langacher 44
8606 Greifensee, Switzerland
Tel. +41 22 567 53 22
Fax +41 22 567 53 23
www.mt.com

Subject to technical changes.
© Mettler-Toledo GmbH 03/2022
30657115A



30657115